6ADG 7554

INSTRUCTIONS FOR USE

GEBRAUCHSANWEISUNG

MODE D'EMPLOI

GEBRUIKSAANWIJZING

ISTRUZIONI PER L'USO

INSTRUCCIONES PARA EL USO

MANUAL DE UTILIZAÇÃO

ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ

BRUKSANVISNING

KÄYTTÖOHJE

BRUGSANVISNING

ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ

BRUKSANVISNING

NÁVOD K POUŽITÍ

ИНСТРУКЦИИ ЗА ИЗПОЛЗВАНЕ

NÁVOD NA POUŽITIE

INSTRUKCJA UŻYTKOWANIA

HASZNÁLATI UTASÍTÁS

INSTRUCȚIUNI DE UTILIZARE

הוראות שימוש

تعليمات وكيفيّة الاستعمال

WHIRLPOOL

WARNING

Dishwashing detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with skin and eyes and keep children away from the dishwasher when the door is open.

CHECK that the detergent receptacle is empty after completion of the wash cycle.

! Important !

1. Please read the user instruc[illegible]
2. Ensure the water and electr[illegible] are in good order.
3. Clean the filters regularly; for good wash results, ensure no food residue is left in the filter housing.
4. Replace the filters after cleaning, taking care to ensure they are properly inserted.
5. After filling the regeneration salt container, immediately start a wash programme (a pre-rinse cycle is not sufficient)!
6. Take care not to spill any rinse aid when filling the dispenser close the cover properly after filling (immediately wipe away any rinse aid spilt accidentally. This prevents the formation of excess foam that might spoil washing results).
7. Do not put liquid fat in the dishwasher (e.g. oil used for frying or candle wax).
8. Make sure that the spray arms can rotate freely (ensure they cannot be stopped by crockery or cutlery).
9. To clean the control panel use a slightly damp soft cloth or sponge.
10. The wash programme is finished when the "Start" indicator lamp switches off.

Before using the dishwasher, read the user instructions!

6ADG 7554 Quick Reference Guide

GB

On button

Off button

Programme selection button

START **Start button**

Switches "on" when the dishwasher is operating. Flashes when a fault occurs. Switches off at the end of the programme.

Options

"Half load" button

This function can be used with any programme.
The indicator lamp switches on.
The wash cycle is activated for the upper or lower rack only.

Indicators

Add rinse aid

Programme chart				Detergent 2)		Consumption 3)		
Programmes			Washing instructions	A	B	Litres	kWh	Minutes
	Pre-Rinse	cold	Crockery to be washed later.	-	-	4.0	0.03	14
30'	Quickwash	40°C	Lightly soiled crockery, with no dried-on food.	X	-	10.0	0.65	30
	Normal 1)	40°C	Normally soiled crockery.	X	X	17.0	0.91	95
	Universal	65°C	Normally or heavily soiled crockery.	X	X	13.0	1.45	90
	Intensive	70°C	Recommended programme for heavily soiled crockery, especially suitable for pans and saucepans.	X	X	17.0	1.70	140

1) Reference program for energy label compliance with AS/NZS 2007;

2) Refer to "User instructions";

3) Program data obtained in conformity with European standard EN 50242. Values may vary in relation to usage, e.g.: different loads, water temperatures - above or below 15°C - as well as water hardness and power supply voltage, etc.

Important information for Test Laboratories:
For detailed information on the EN comparison test and other tests, contact the following address:
"nk_customer@email.whirlpool.com".

Whirlpool is a registered trademark of Whirlpool USA

5019 396 91269

(We reserve the right to make technical modifications)

How to use the appliance

Further indications are given in the single chapters and in the user instructions.

Open the door, switch on the appliance

Press the **ON** button.

How to fill the detergent dispenser

Large compartment **A:**
With each wash cycle.
Small compartment **B:**
For programmes with pre-wash only.

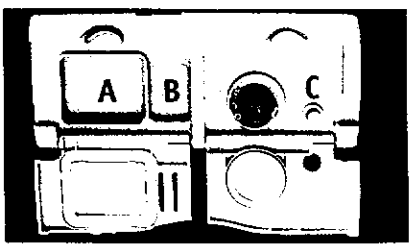

Check the rinse aid level

Mechanical indicator **C.**
Electric indicator on control panel (if provided).

Check the regeneration salt level

On models with water softener system only.
Mechanical indicator **D.** Electric indicator on control panel (if provided).

Load the racks

Refer to the dishwasher loading instructions.

Select a programme

The last programme selected will light up.
Press the ▷ button until the desired programme lights up.

Select options

If necessary (and if provided)
the corresponding indicator lamp lights up.

Press the Start button

The selected programme is then memorised (even in the event of power failure).

"Change programme"
- Press the START button for 2 sec. until the Start indicator lamp switches off;
- Select another programme and press the START button again.

Turn on the water tap close the dishwasher door

Wash cycle

- Only open the dishwasher if necessary (Warning: beware of hot steam).
- If the appliance is switched off during a wash cycle, when switched on again it will resume the cycle from where it was interrupted.

Switch off the appliance

At the end of the programme an acoustic signal will sound.
Only after the START button has switched off: **press the OFF button.**
All the indicator lamps switch off.

Turn off the water tap, unload the racks

To accelerate the drying process, slightly open the door at the end of the program.
WARNING: WHEN THE DOOR IS OPENED STEAM COMES OUT!
Unload the appliance, starting from the lower rack.

Dishwasher loading instructions and racks provided

Upper rack:

depending on the model

Multi-purpose support (A): [1]
Depending on the position, for long-handles utensils, cups and glasses. May be used in three different positions.

Crockery holders (B):
Depending on the position, for example plates, cups and long-stemmed glasses.

Revolving glass support (C): [2]
Depending on the position, for example small or long-stemmed glasses.

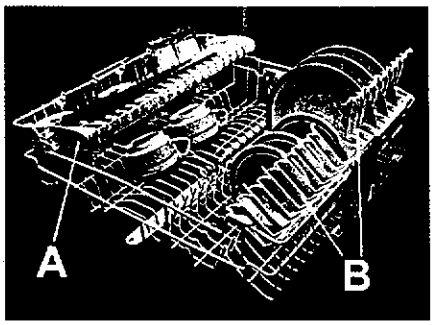

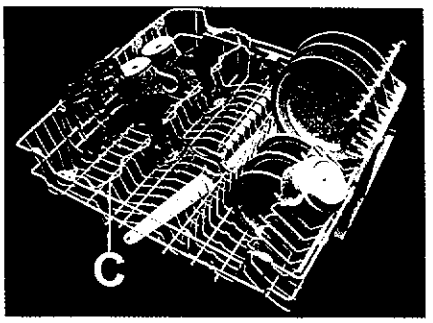

Half Load:

Load the upper rack **only**.

Place the cutlery basket (**D**) in the upper rack.

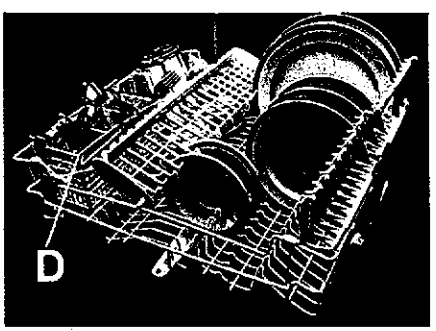

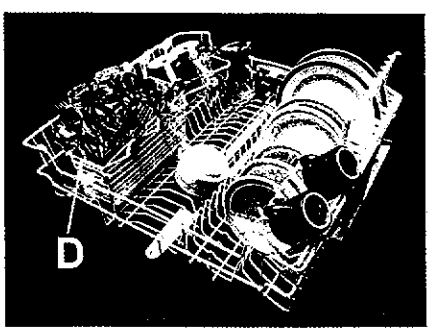

Rack height adjustment (also when loaded):

- **Lower adjustment:** pull out the **two** rack handles outwards (**E**) and lower the rack.
- **Upper adjustment:** pull the **two** handles (**E**) upwards until the rack clicks into place (Factory setting).

The rack must be level on both sides.

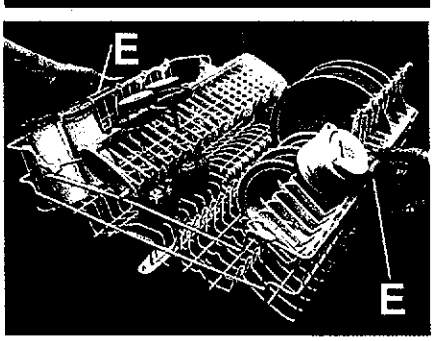

Lower rack:

Depending on the model with fixed or tilting plate holders (**F**).

Half Load:

Load the lower rack **only**.

Greater washing power, particularly for plates and saucepans.

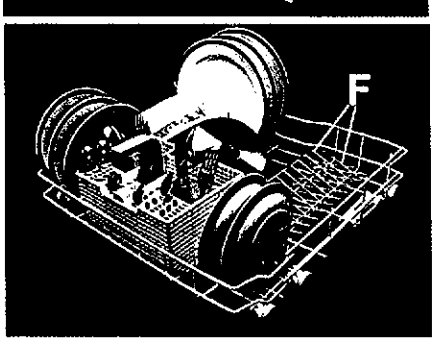

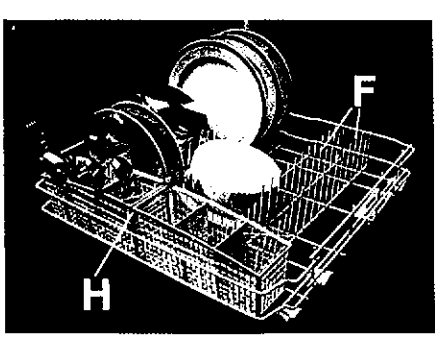

Cutlery basket (G) or (H):

Some models are provided with a grid (**I**) that can be fitted onto the cutlery basket to keep items separated. Cutlery basket (**D**) for appliances with half load only. Sharp knives and forks that might cause injury must be placed in the cutlery basket with the handles positioned upwards.

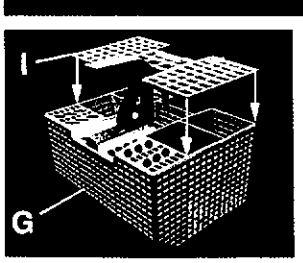

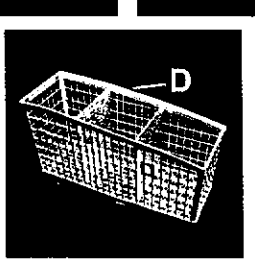

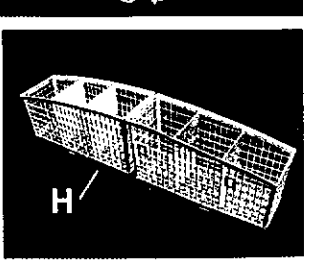

Only use dishwasher-proof crockery and dishes. Do not use the appliance for items not suitable for washing in a dishwasher, for example wooden items, aluminium, plastic utensils, tin, hand-decorated crockery (unglazed), silver cutlery.

Spare parts which are sold separately:

[1] **Multi-purpose support (A) - N. AMH 369 series.**

[2] **Revolving glass support (C) - N. WGH 1000 series.**

What to do if...

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem (* see also the corresponding chapter in the user instructions).

Problem	Cause	Remedy
The appliance is not working	• No water supply.	• Open the tap.
	• The appliance does not load sufficient water.	• Clean the water supply tap filter. • Ensure there are no kinks in the water hose.
	• There is a power failure.	• Insert the plug into the mains socket. • Press the Start button. • Close the door. • Check the domestic circuit fuse.
	• Starting the selected programme.	• The programme can be set to "0" to start.
If crockery is not perfectly dry	• Insufficient rinse aid.	• Increase dosage *.
	• Residual water in cavities.	• Load crockery at an angle.
If crockery is not perfectly clean	• The water jet does not reach the crockery.	• Arrange crockery so that items do not touch each other. Load crockery upside down.
	• Insufficient detergent.	• Follow recommended detergent dosage.
	• Unsuitable programme.	• Select a more intense wash cycle.
	• Spray arms blocked.	• The spray arms must be able to turn freely.
	• Spray arm nozzles clogged.	• Remove any impurities obstructing the water flow *.
	• Incorrect detergent/detergent too old.	• Use a good quality detergent.
Sandy or grainy residues	• Clogged filters.	• Check filters regularly/if necessary clean *.
	• Filters incorrectly assembled.	• Insert the filter correctly *.
Colour of plastic parts faded	• Tomato/carrot juice,...	• Depending on the material, if necessary use a detergent with a greater whitening power.
Deposits on crockery		
• removable	• Streaks on the crockery/glasses.	• Increase the rinse aid dosage *.
	• Streaks on glasses.	• Reduce the rinse aid dosage *.
	• Layer of salt on crockery/glasses.	• Close the salt container lid properly *.
• not removable	• Insufficient water softening, calcium deposits.	• Change water hardness setting, if necessary add salt *.
Opaque glasses/ glasses not sparkling	• Cannot be washed in the dishwasher.	• Use suitable glasses.
Rust on cutlery	• Not made of stainless steel.	• Use suitable cutlery.
Identifying appliance faults	• The START indicator lamp flashes.	• Ensure that the filter assembly is not clogged and if necessary clean it *. Start the programme again. Press the Start button for 2 seconds, until the Start indicator lamp switches off. Select a new programme and press the Start button again.
	• Indicator F... (if provided).	• Call the After-Sales Service.

If after carrying out the above checks the malfunction persists or appears again, turn the appliance off and turn off the water supply tap, then call our After-Sales Service (see guarantee).

Before contacting our After-Sales Service, take note of the following:

- The nature of the fault.
- The appliance type and model.
- The service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side.



INSTRUCTIONS FOR USE

BEFORE USING THE DISHWASHER/CONNECTIONS

ELECTRICAL CONNECTION

PRECAUTIONS AND GENERAL RECOMMENDATIONS

HOW TO FILL THE SALT CONTAINER

HOW TO FILL THE RINSE AID DISPENSER

HOW TO FILL THE DETERGENT DISPENSER

CARE AND MAINTENANCE

BEFORE USING THE DISHWASHER/CONNECTIONS

1. **Removing the packaging and controls:**
   After unpacking, make sure that the dishwasher is undamaged and that the door closes correctly. If in doubt, contact a qualified technician or your local retailer.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.

2. **Water and electrical connections:**
   All water and electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions (refer to the enclosed installation booklet) and current local safety regulations.
   The appliance must only be used in the household for the prescribed uses.

   Do not use the dishwasher if it has been damaged in transit. Consult your local retailer or our After-Sales Service.

   (Refer to the separate installation instructions booklet)

3. **Water inlet and drain:**
- Observe any special regulations issued by your local Water Board.
  Water supply pressure: 0.3 - 10 bar.
- Make sure the inlet and drain hoses are kink-free and are not crushed.
- If the hose length is not sufficient, please contact your local dealer or our After-Sales Service.
- The inlet hose must be securely clamped to the water tap to prevent leaks.
- The inlet water temperature varies according to the model installed. Inlet hose marked "25°C Max": maximum temperature 25°C.
  All other models: maximum temperature 60° C.
- When installing the appliance, make sure the drain water discharges correctly (if necessary, remove the wire gauze from the sink siphon).
- Fix the drain hose to the spigot with a clamp to prevent it from coming off during operation.
  For appliances with water-stop system only: If the water connections are made correctly, the water-stop system safeguards your home against damage caused by flooding.

4. **Electrical connection:**
- Closely adhere to local Electricity Board regulations.
- Voltage information is shown on the rating plate mounted inside the door on the right hand side.
- The appliance must be earthed as prescribed by law.
- Do not use extension leads or multiple adapters.
- Before carrying out maintenance, disconnect the mains plug.
- The power cable must only be replaced by authorized personnel.

Warning for models provided with LCD display:
The mains plug must be positioned in an easily accessible place.

- **For Austria:** if the apparatus is series connected to a fault current switch, this must be sensitive to the pulsating current.

6 ADG 7554

(D) (CH) (A)

Montageanweisung

Voll integrierbares Modell
Gerät muß während der Montage spannungsfrei sein!
Siehe auch Gebrauchsanweisung!
Montageanweisung bitte aufbewahren! Technische Änderungen vorbehalten!

(GB) (AUS)

Installation instructions

Fully built-in model
During installation the appliance must not be connected to power supply!
Also see the instructions for use!
Please keep the installation instructions in a safe place! Subject to technical alterations.

(F) (B) (CH)

Instructions de montage

Modèle parfaitement intégrable
L'appareil ne doit pas être sous tension durant le montage!
Voir également le mode d'emploi!
Conserver les instructions de montage! Sous réserve de modifications techniques.

(NL) (B)

Montage-instrukties

Volledig integreerbaar model
Het apparaat mag tijdens de montage niet op het elektrische net zijn aangesloten!
Zie ook de gebruiksaanwijzing!
Montage-instrukties bewaren a.u.b.! Technische veranderingen voorbehouden.

(E)

Instrucciones para el montaje

Modelo de empotrar integral
¡Durante la operación de montaje del aparato no tiene que haber corriente!
¡Véanxe también las instrucciones para el uso!
¡Guardar las instrucciones para el montaje! Posibilidad de modificaciones técnicas.

(P)

Instruções para a montagem

Modelo completamente encaixado
Quando se proceder à montagem do aparelho a corrente terá que estar desligada!
Consultar também as instruções de uso!
Conserve as instruções para a montagem! Possibilidade de eventuais modificações técnicas.

(I) (CH)

Istruzioni per il montaggio

Modello da incasso integrale
Durante l'operazione di montaggio dell'apparecchio non deve esserci corrente!
Vedere anche le istruzioni di impiego!
Conservare le istruzioni per il montaggio! Con riserva di introdurre modifiche tecniche.

(GR)

Οδηγίες για το μονταρισμα

Μοντελο με ολοκληρωμένο περίγυρο
Κατά την διαρκεια της εγκαταστασης η συσκευή δεν πρέπει να είναι στο ρευμα!
Επίσης δείτε τις οδηγίες χρήσης!
Διατηρείστε τις οδηγιές μονταρίσματος! Διατηρούμε το δικαίωμα να εισαγουμε τεχνικές αλλαγές.

1

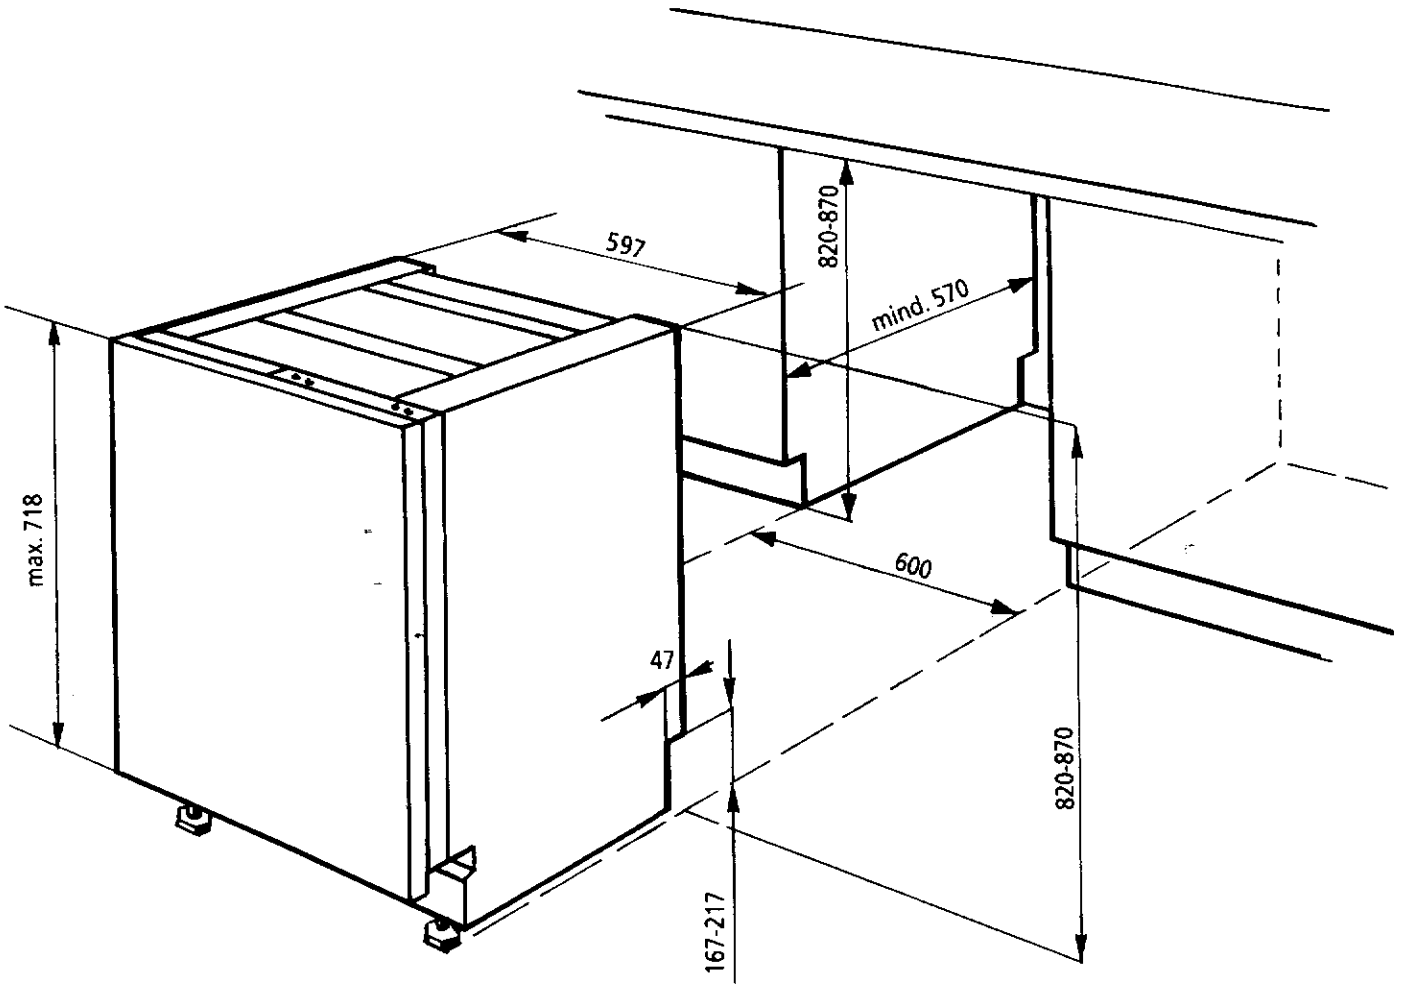

Ⓓ Achtung: Geschirrspüler nur mit montierter Möbeltür und im eingebauten Zustand betreiben!

ⒼⒷ Attention: Use the dishwasher only after it has been built in and after the cabinet door has been put on!

Ⓕ Attention: Ne faire fonctionner le lave-vaisselle qu'après l'avoir encastré et avoir monté la porte du meuble!

ⓃⓁ Belangrijk: Stel de afwasmachine niet in werking voordat deze is ingebouwd en de meubeldeur is gemonteerd!

Ⓔ ¡Atención: Poner en marcha el lavavajillas sólo después de empotrarlo y de montar la puerta del mueble!

Ⓟ Atencão: Pôr em funcionamento a máquina, somente depois de seu encaixe e após ter instalado a porta do móvel!

Ⓘ Attenzione: Far funzionare la lavastoviglie solo ad incasso avvenuto e dopo aver montato la porta del mobile!

ⒼⓇ Προσοχή: Χρησιμοποιήτε το πλυντήριο πιάτων μόνο με μονταριζμένη πόρτα και σε μονταρισμένη κατάσταση!

2

(D) Schutz gegen feuchten Dampf.
(GB) Protection against damp steam.
(F) Protection contre vapeur humide.
(NL) Bescherming tegen stoom.
(E) Protección contra vapores.
(P) Proteger dos vapores.
(I) Protezione dai vapori.
(GR) Προστασία από ατμούς.

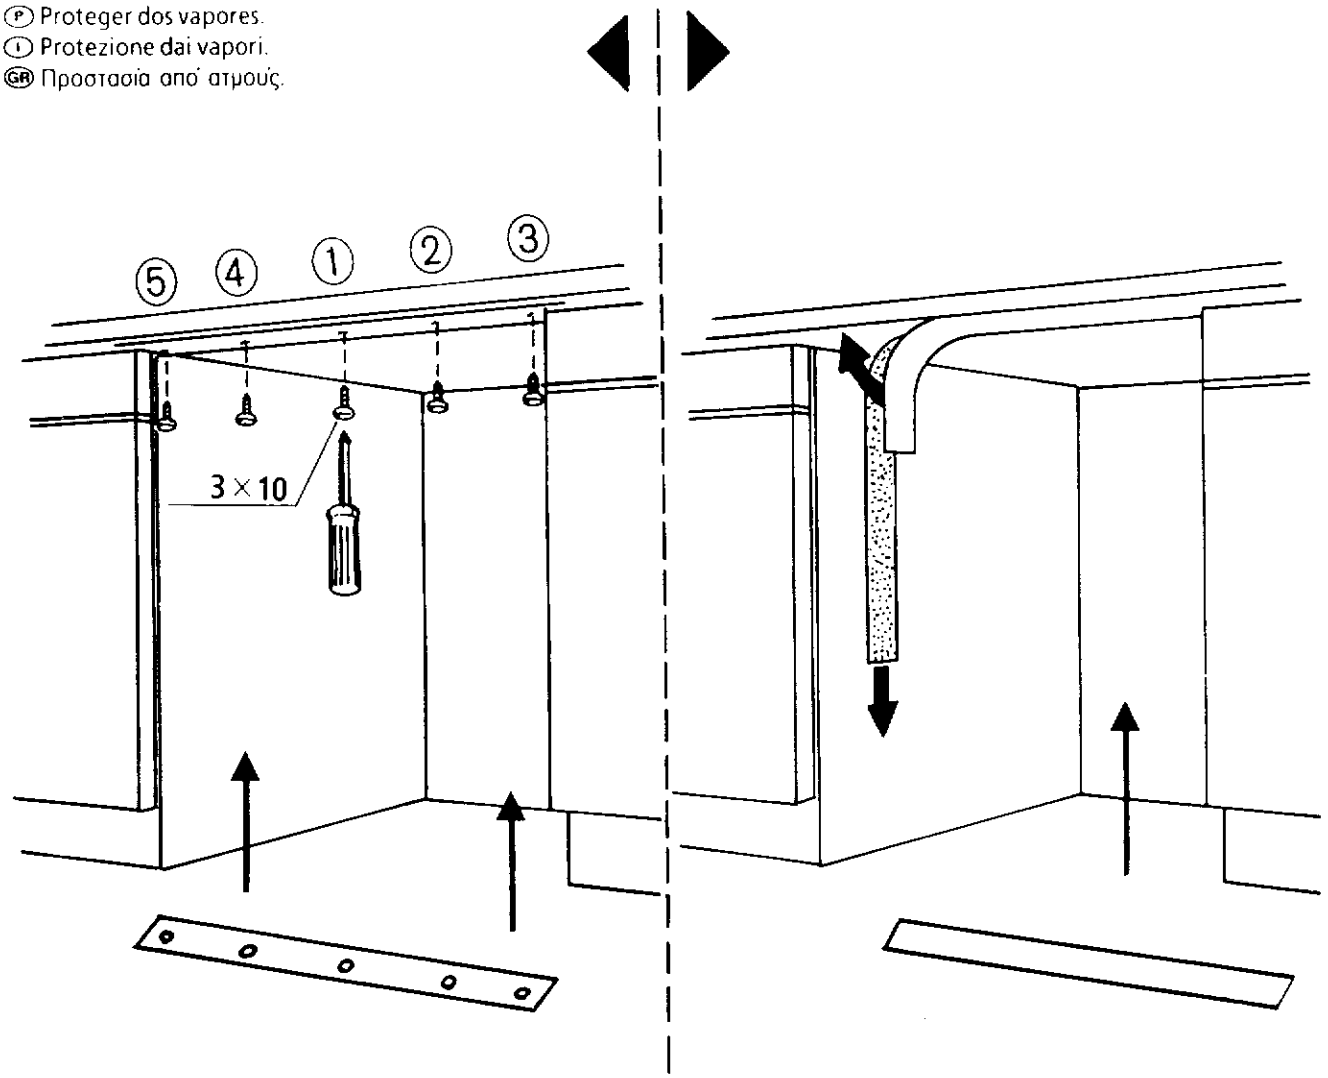

3

(D) Zulaufschlauch fest und dicht mit Wasseranschluß verbinden!
(GB) Tightly fit the inlet to the water tap!
(F) Raccorder le tuyau d'alimentation de façon solide et étanche au robinet d'eau!
(NL) Sluit de toeveorslang stevig aan op de waterkraan!
(E) Conectar fuertemente el tubo de alimentación a la conexión del agua!
(P) Ligar estritamente o tubo de alimentação á ligação da água!
(I) Collegare strettamente il tubo di alimentazione all'allacciamento dell'acqua!
(GR) Συνδέστε ερμητικά το σωλήνα τροφοδοσίας στην βρύση.

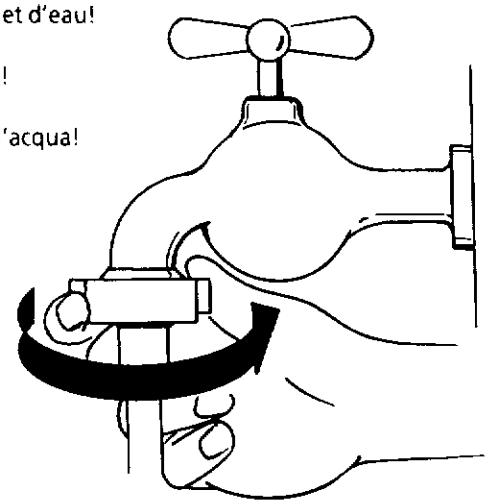

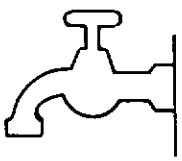

P = 0,3–10 bar
(0,03–1,0 MPa)

(D) Wasseranschluß je nach Ausführung:
(GB) Water connection – depending on the model:
(F) Raccordement hydraulique, suivant le modèle:
(NL) Wateraansluiting, verschillend per uitvoering:
(E) Conexión hidráulica – según el modelo:
(P) Ligação hidráulica – segundo o modelo:
(I) Collegamento idraulico – secondo il modello:
(GR) Υδραυλική σύνδεση – αναλογα με το μοντελο:

(D) Standard
(GB) Standard
(F) Standard
(NL) Standaard
(E) Estándar
(P) Padronizado
(I) Standard
(GR) Στάνταρ

(D) Wasserstopsysteme
(GB) Water stop system
(F) Système Wasserstop
(NL) Waterstopsysteem
(E) Sistema agua stop
(P) Sistema de interrupção da água (água -stop)
(I) Sistema acqua-stop
(GR) Σύστημα σταματήματος του νερού

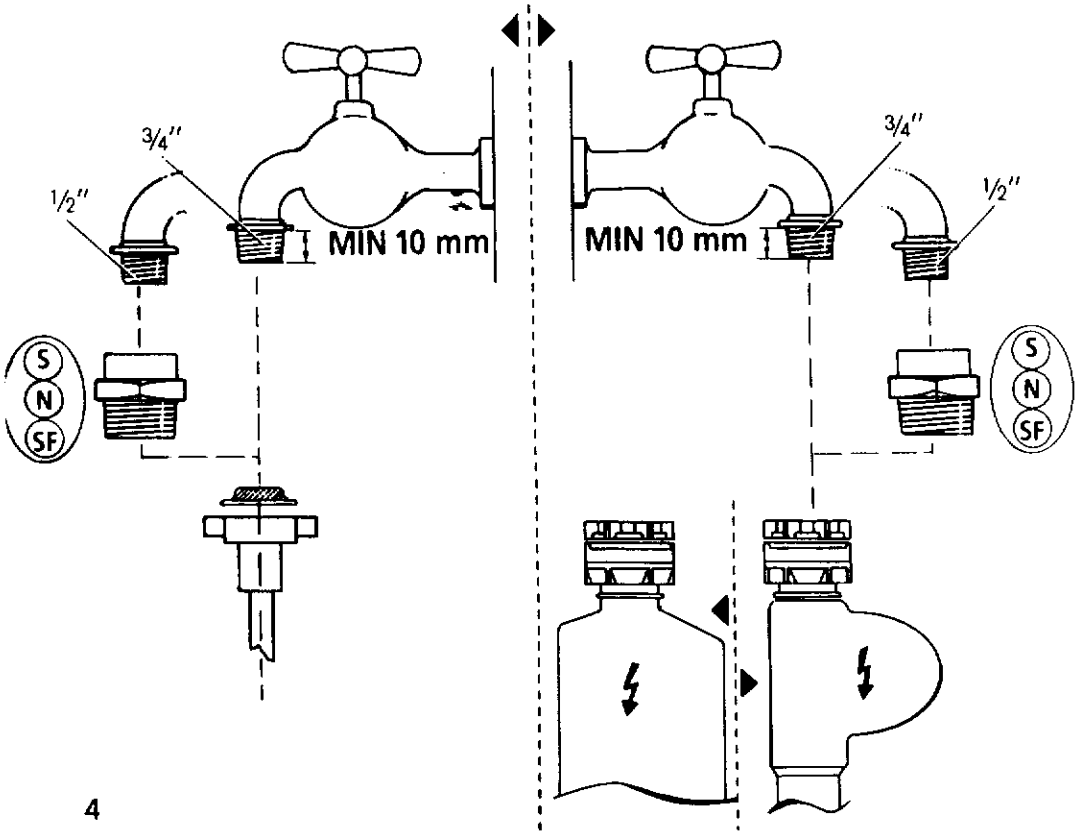

(D) Sofern vorhanden: Einbaulage Wasserstop beliebig!
(GB) If provided, you can position the water stop according to your requirements!
(F) S'il existe: Installer l' Acqua-Stop dans l'encastrement suivant la nécéssité!
(NL) Indien aanwezig kunt u desgewenst de waterstop monteren!
(E) ¡Si disponible: montar el Dispositivo Agua Stop, segúa necessidade!
(P) Se disponivel: Instalar el dispositivo água-stop, como necessário!
(I) Se disponibile: posizionare il dispositivo Acqua-stop, secondo necessità!
(GR) Αν είναι διαθέσιμο: τοποθετείστε το acqua-stop στην θέση που προτιμάτε!

4

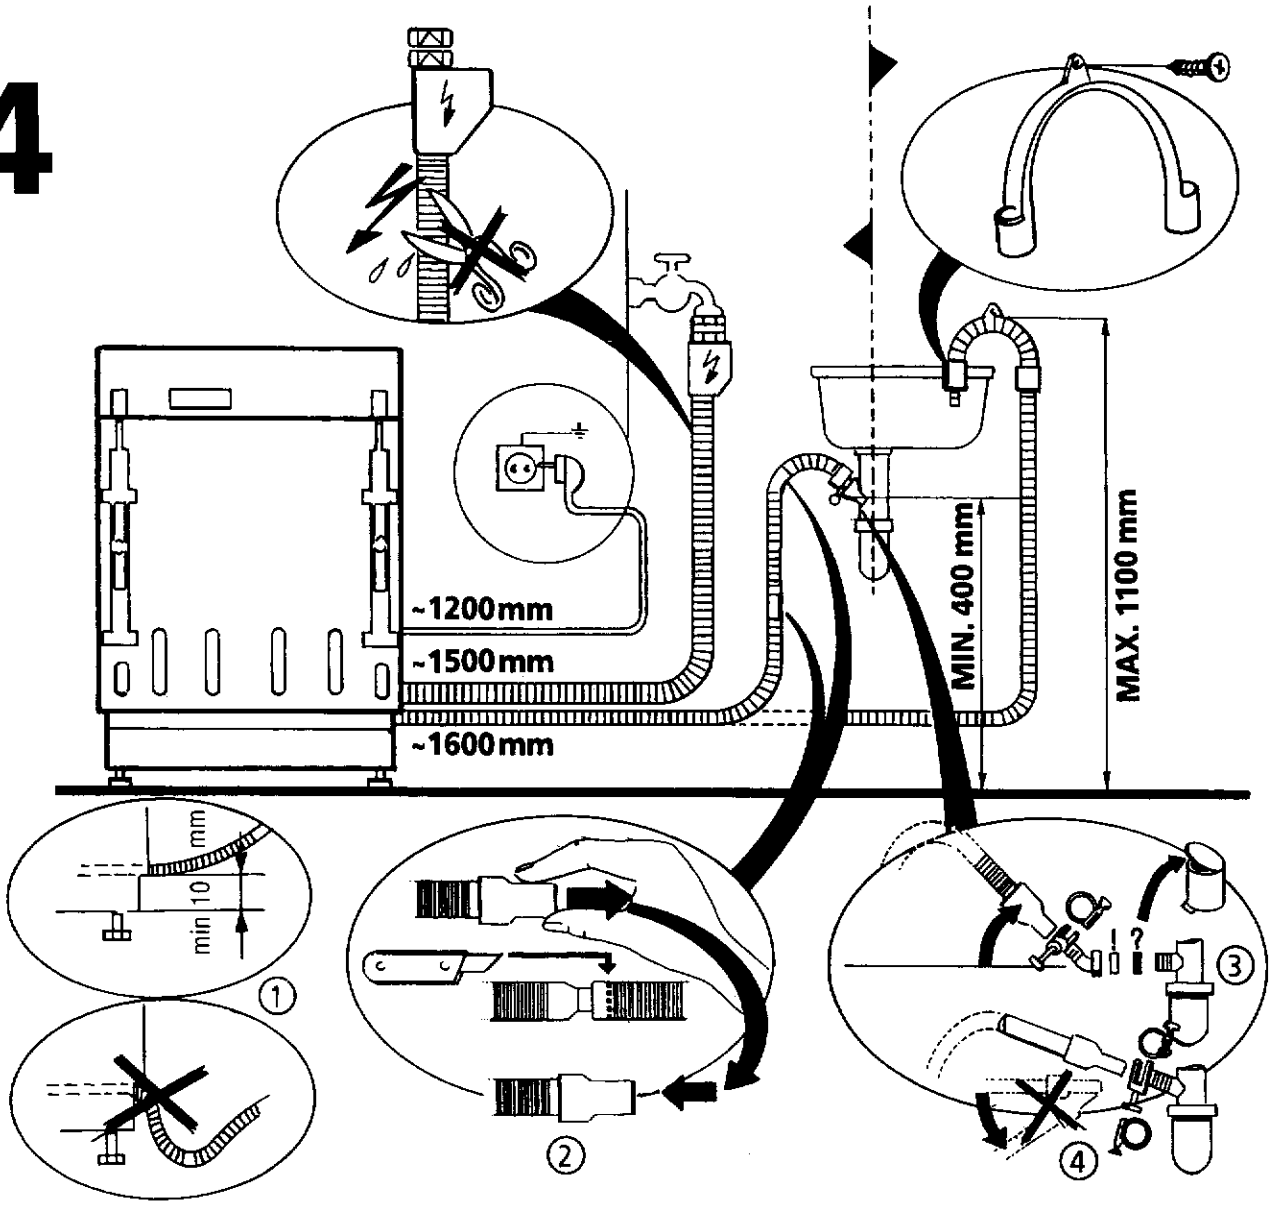

1
- (D) Ablaufschlauch aufsteigend verlegen!
- (GB) The outlet hose should point upward!
- (F) Faire monter le tuyau de vidange!
- (NL) Leg de afvoerslang in stijgende richting aan!
- (E) ¡Instalar el tubo de desagüe con la inclinación necesaria!
- (P) Instalar o tubo de descarga com a inclinação necessária!
- (I) Installare il tubo di scarico con la necessaria inclinazione!
- (GR) Εγκαταστείστε τον σωλήνα εξοδου προς τα πάνω!

2
- (D) Wenn nötig, Ablaufschlauch an markierten Stellen kürzen.
- (GB) If the outlet hose ist too long, cut it where ist ist marked.
- (F) Si nécessaire, raccourcir le tuyau de vidange aux endroits marqu´es.
- (NL) Als de afvoerslang moet worden ingekort dan kunt u deze door de gemarkeerde punten afsnijden.
- (E) Si fuera necesario, acortar el tubo de desagüe en los puntos marcados.
- (P) Se for necessário, encurtar o tubo de descarga nos pontos marcados.
- (I) Se necessario, accorciare il tubo di scarico nei punti contrassegnati.
- (GR) Αν είναι απαραίτητο, κόψτε τον σωλήνα εξοδου στα σημεία που είναι σημειωμένα.

3
- (D) Abfluß muß frei sein!
- (GB) Make sure drained water flows away freely!
- (F) L'eau de vidange doit s'écouler librement!
- (NL) De afvoer moet open zijn!
- (E) ¡Dejar el desagüe libre!
- (P) Manter o tubo de descarga livre!
- (I) Lasciare libero lo scarico!
- (GR) Αφήστε ελεύθερο το νερό εξοδου.

4
- (D) Ablaufschlauch mit Schelle sichern.
- (GB) Fasten the outlet hose with a clamp.
- (F) Fixer le tuayau de vidange par un croche.
- (NL) Breng een pakkingsring aan op de afvoerslang.
- (E) Asegurar la estanqueidad del tubo de desagüe montando un collarín.
- (P) Garantir a estanqueidade do tubo de descarga montando uma faixa.
- (I) Assicurare la tenuta del tubo di scarico montandovi una fascetta.
- (GR) Σφιξτε τον σωλήνα εξοδου με ένα δακτυλιο.

5

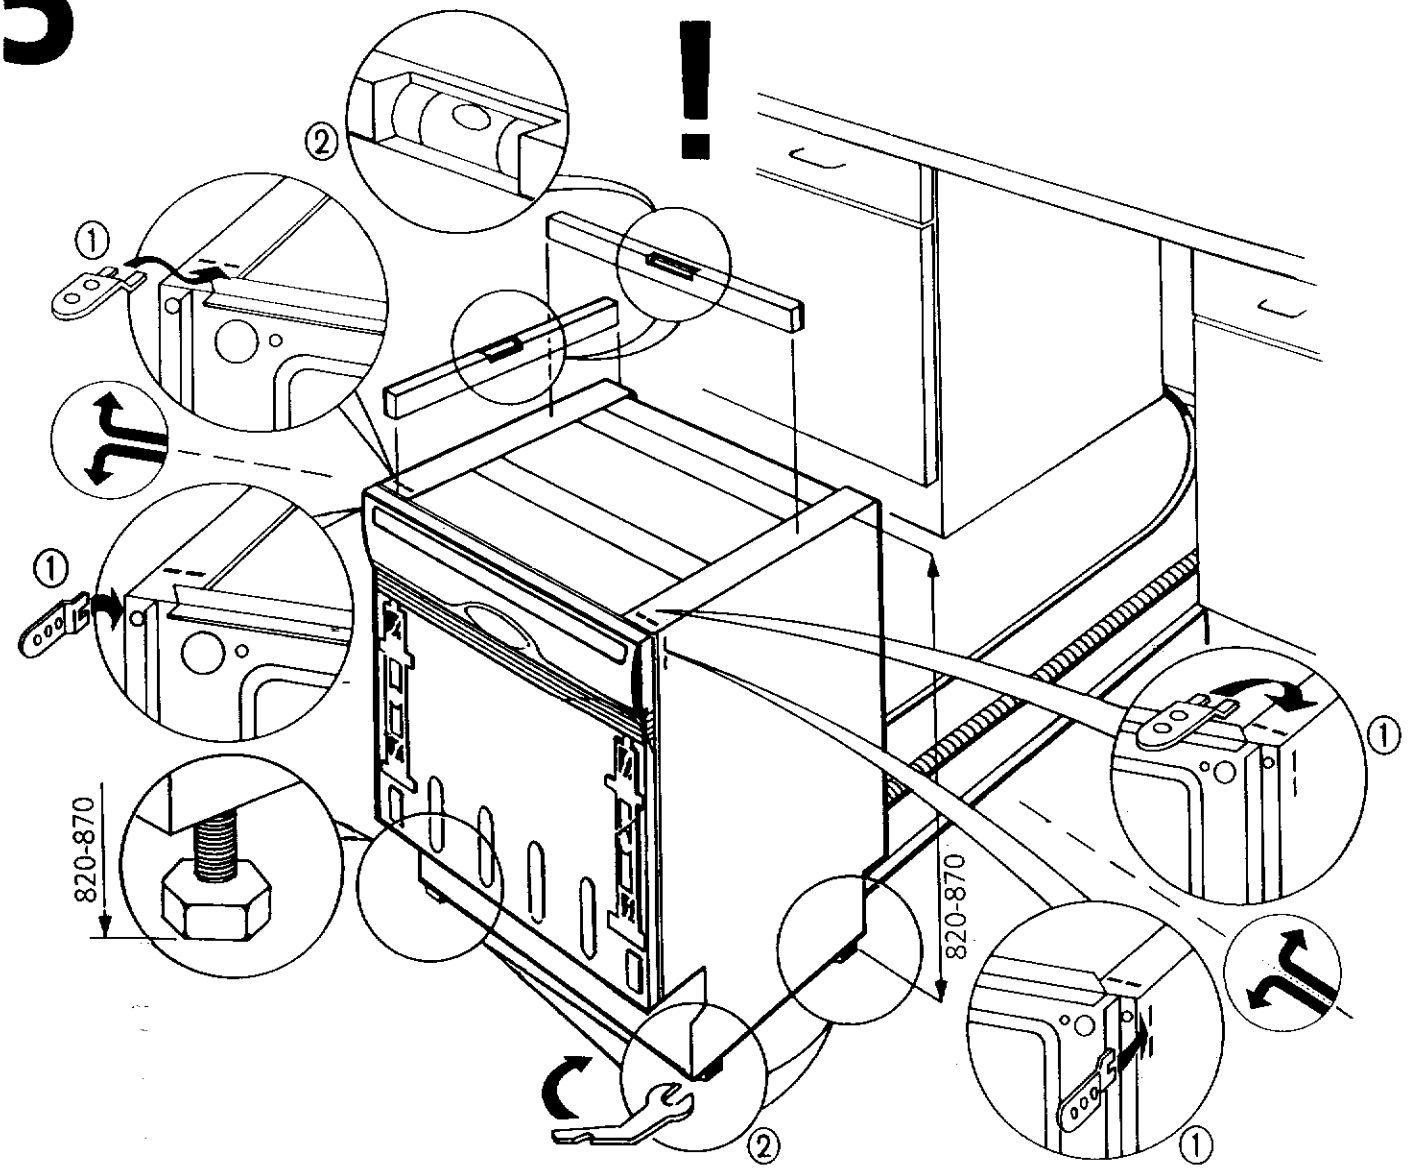

③

Ⓓ Achtung bei unebener Aufstellfläche:
Geschirrspüler mit weit herausgedrehten Füßen vorsichtig unter Arbeitsplatte schieben!

ⒼⒷ Be careful about irregular surfaces: Regulate the foot height, push the dishwasher under the worktop!

Ⓕ Attention lorsque la surface de l'emplacement n'est pa plane: régler la hauteur des pieds. Glisser le lave-vaisselle au-dessous du plan de travail!

Ⓝⓛ Let op als de vloer niet vlak is: Schuif de vaatwasser met ver uitgedraaide voeten voorzichtig onder het aanrecht!

Ⓔ ¡Tener cuidado con superficies no regulares! Regular adecuadamente la altura de los pies. Introducir el lavavajillas debajo de la encimera de trabajo!

Ⓟ Preste atenção às superfícies irregulares! Ajuste adequadamente a altura dos pezinhos. Empurre al máquina de lavar loiça sob a superficie de trabalho!

Ⓘ Attenzione a superfici non regolari! Regolare adeguatamente l'altezza dei piedini. Spingere la lavastoviglie sotto il piano di lavoro!

Ⓖⓡ Προσοχή στις μη ομαλές επιφάνειες! Ρυθμίστε όπως πρέπει το ύψος των ποδιών. Σπρώξτε το πλυντήριο κάτω από το επίπεδο εργασίας!

6

①

Ⓓ Geschirrspüler nicht unter Arbeitsplatte klemmen!
Spalt vorsehen: max. = 2 mm, min. = 1 mm.
Ⓖⓑ Do not jam the dishwasher under the worktop!
Clearance: max. = 2 mm, min. = 1 mm.
Ⓕ Ne pas coller le lave-vaisselle sous le plan de travail.
Prévoir un espace: max. = 2 mm, min. = 1 mm.
Ⓝⓛ Klem de afwasmachine niet onder het aanrecht vast!
Laat een kleine gleuf open: max. = 2 mm, min. = 1 mm.
Ⓔ !No encaje el lavavajillas debajo de la superficie de trabajo!
Prevea un espacio mínimo de 1 mm o bien máximo de 2 mm.
Ⓟ Não encaixar a máquina de lavar loiça por baixo da bancada de trabalho!
Ⓘ Non incastrare la lavastoviglie sotto il piano di lavoro!
Prevedere uno spazio minimo di 1 oppure massimo di 2 mm.
Ⓖⓡ Μην μπλοκάρετε το πλυντήριο κάτω από το επίπεδο εργασίας!
Προβλέψτε ένα ελάχιστο ύψος 1 χιλ. ή μέγιστο 2 χιλ.

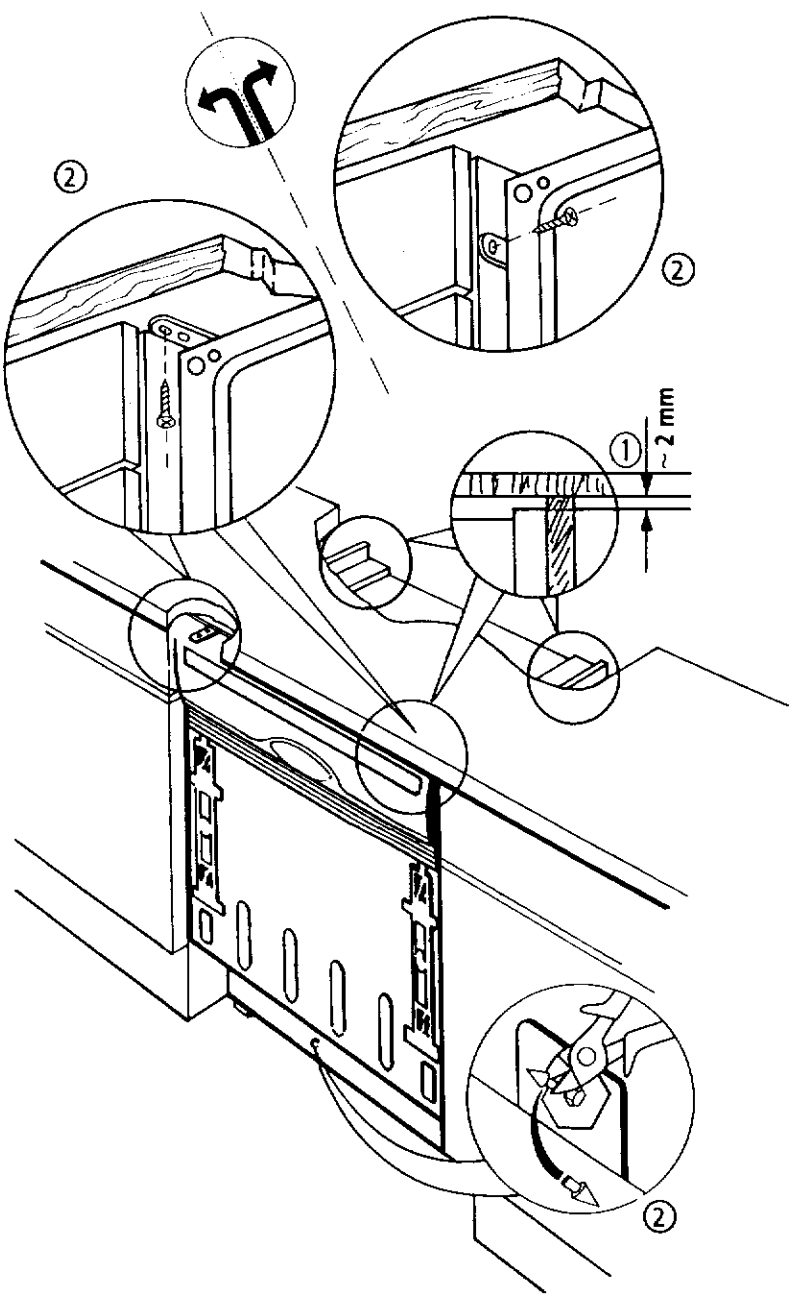

7.1

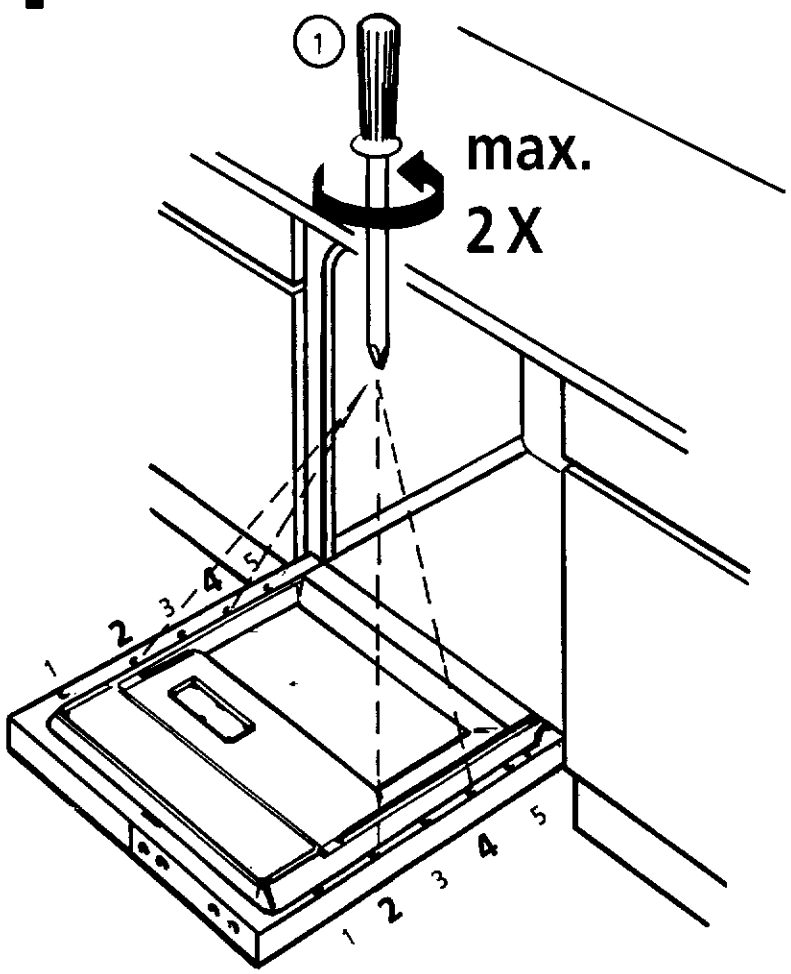

①

Ⓓ Schrauben 2+4 mit max. 2 Umdrehungen lockern, nicht lösen!
Keinen Elektroschrauber verwenden!

Ⓖⓑ Loosen screws 2 and 4 by max. 2 turns, don't unscrew them completely!
Do not use electric screwdrivers!

Ⓕ Desserrer les vis 2+4 de 2 tours max., ne pas les dévisser complètement!
Ne pas utiliser un tournevis électrique!

Ⓝⓛ Draai schroeven 2 en 4 los; niet verwijderen! (max. 2 slagen)
Geen elektrisch gereedschap gebruiken!

Ⓔ ¡Aflojar los tornillos 2 y 4 hasta un máximo de 2 vueltas, sin destornillarlos completamente!
No usar destornilladores eléctricos!

Ⓟ Afrouxar os parafusos 2 e 4 no máximo de 2 rotações, sem desaparafusá-los completamente.
Não usar chaves de parafusos eléctricos!

Ⓘ Allentare le viti 2 e 4 per un massimo di 2 giri, senza svitarle del tutto!
Non usare cacciaviti elettrici.

Ⓖⓡ Χαλαρώστε τις βίδες 2 και 4 για το πολύ 2 γύρους χωρίς να τις ξεβιδώσετε τελείως!
Μην χρησιμοποιείτε ηλεκτρικές συσκευές.

7.2

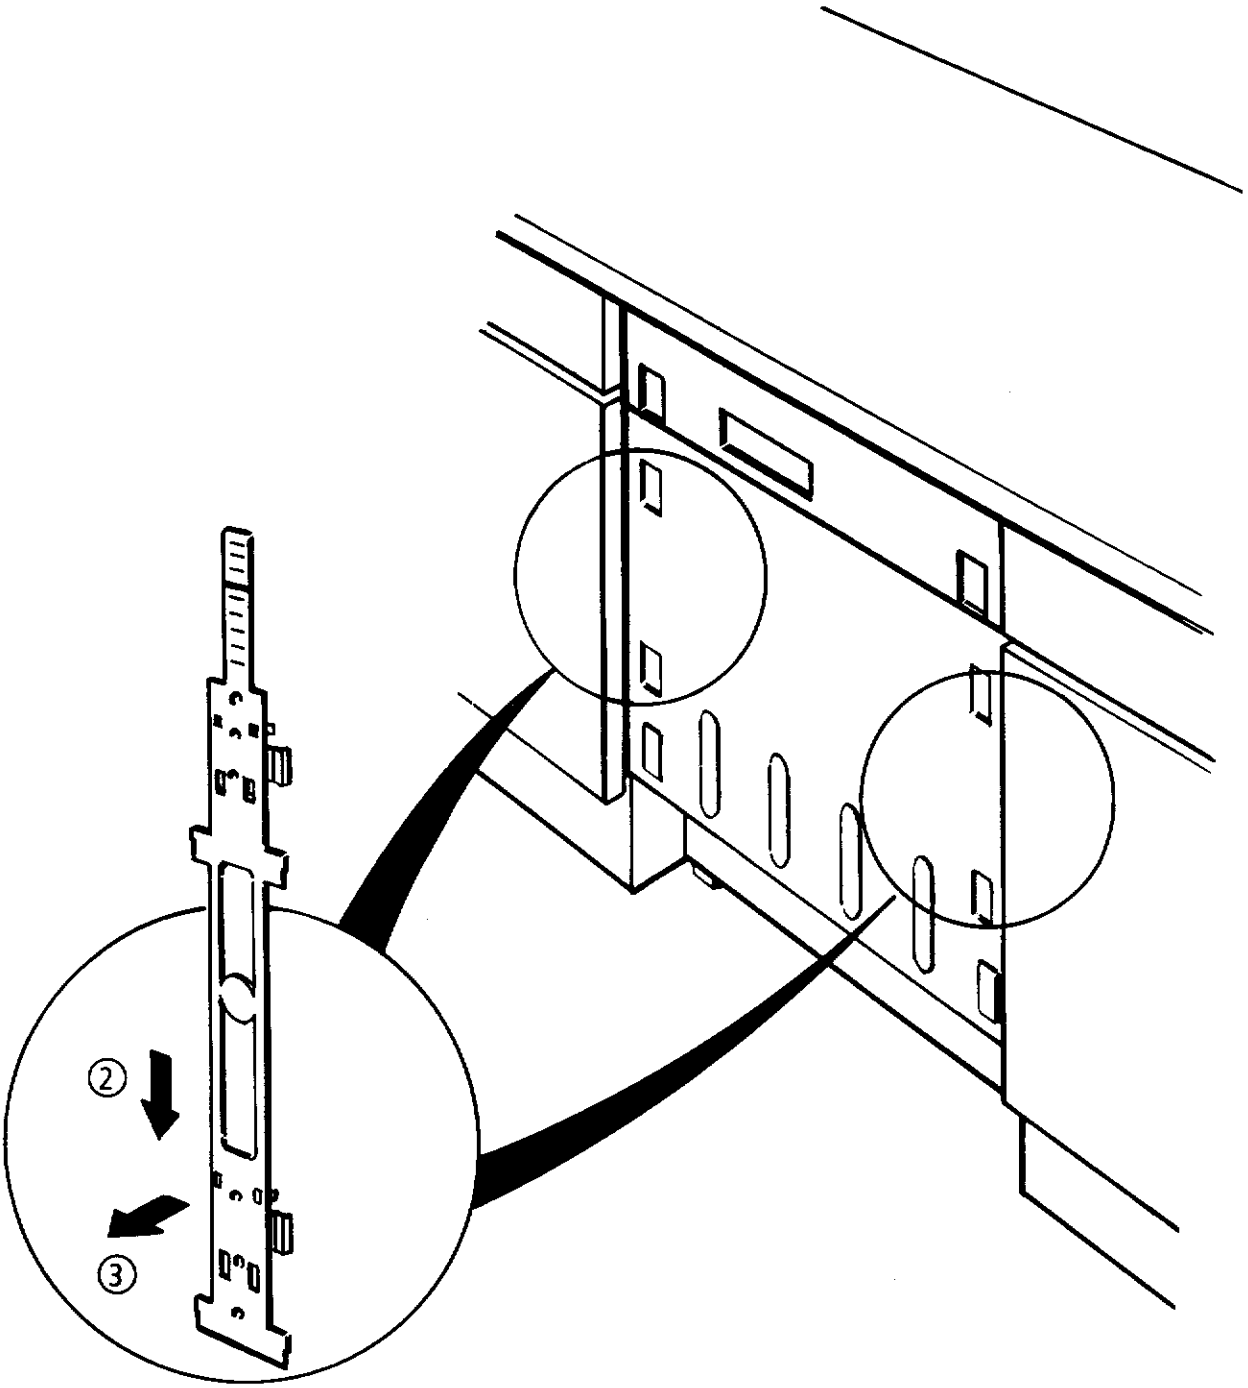

8

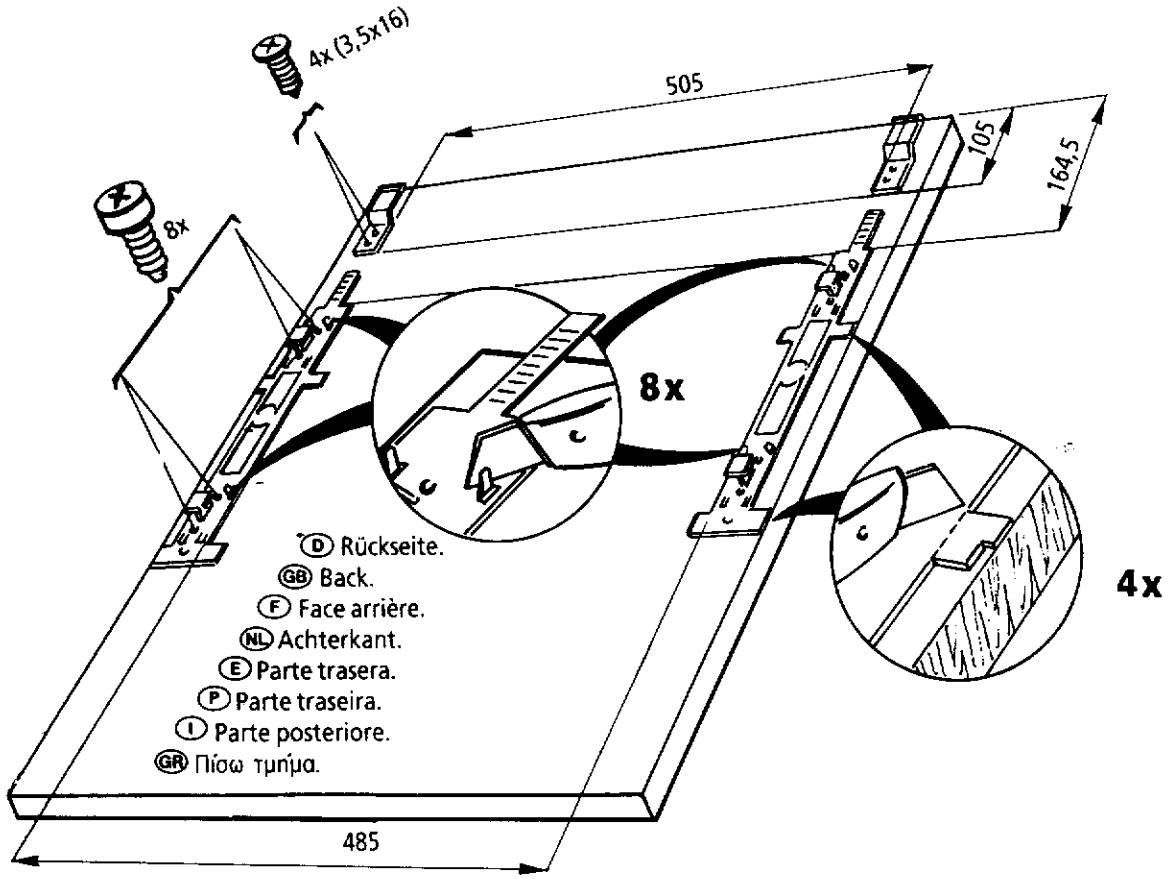
4x (3,5x16)
505
105
164,5
8x
8x
4x
Ⓓ Rückseite.
ⒼⒷ Back.
Ⓕ Face arrière.
ⓃⓁ Achterkant.
Ⓔ Parte trasera.
Ⓟ Parte traseira.
Ⓘ Parte posteriore.
ⒼⓇ Πίσω τμήμα.
485

9

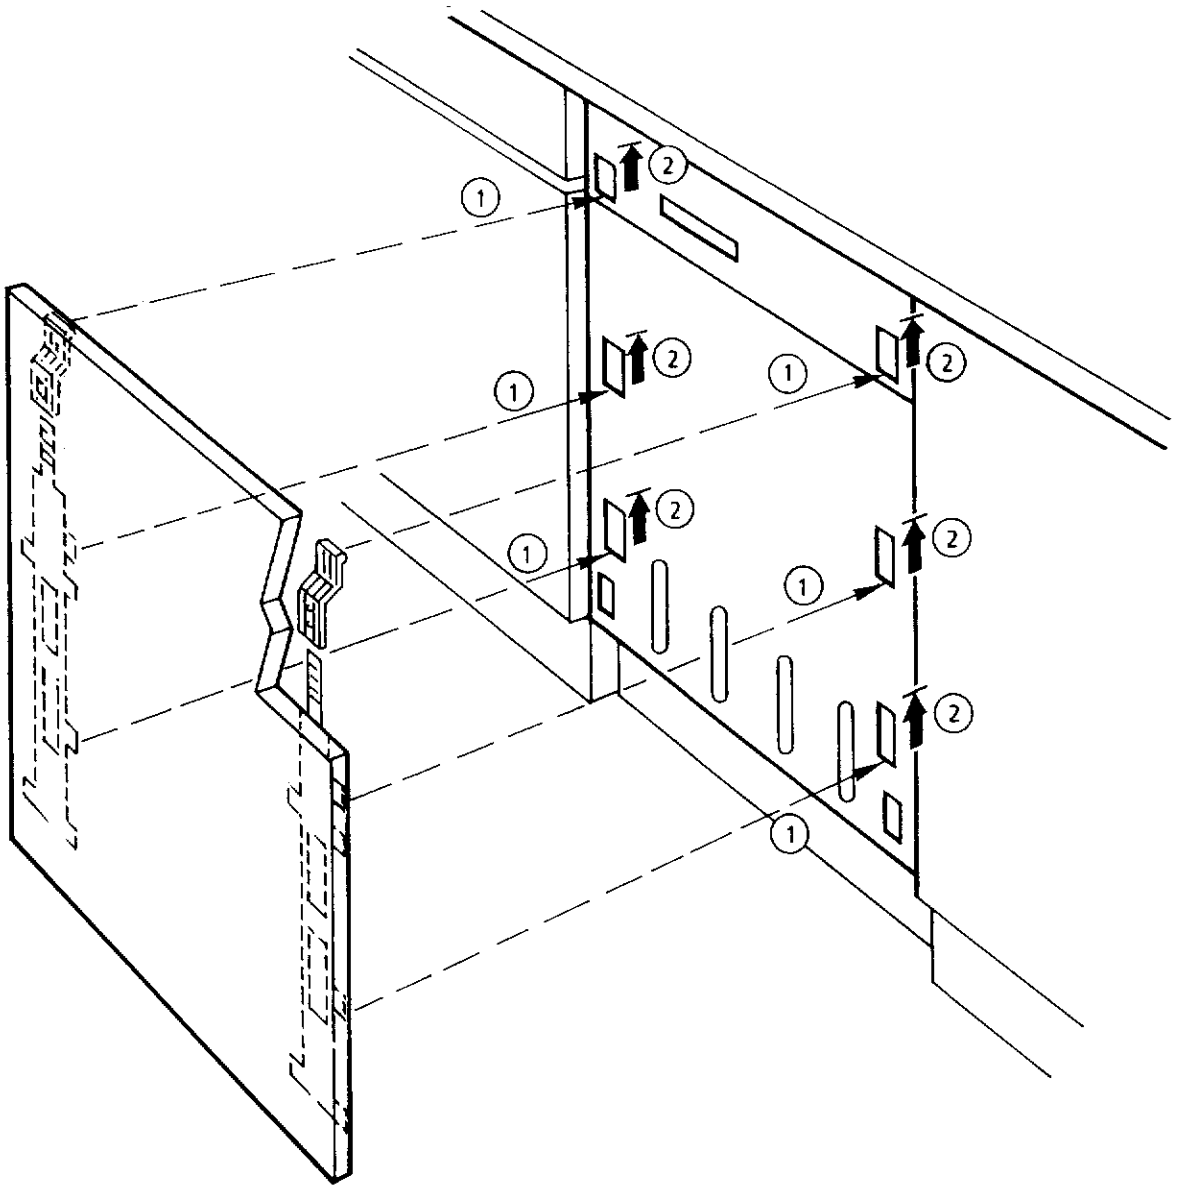

10

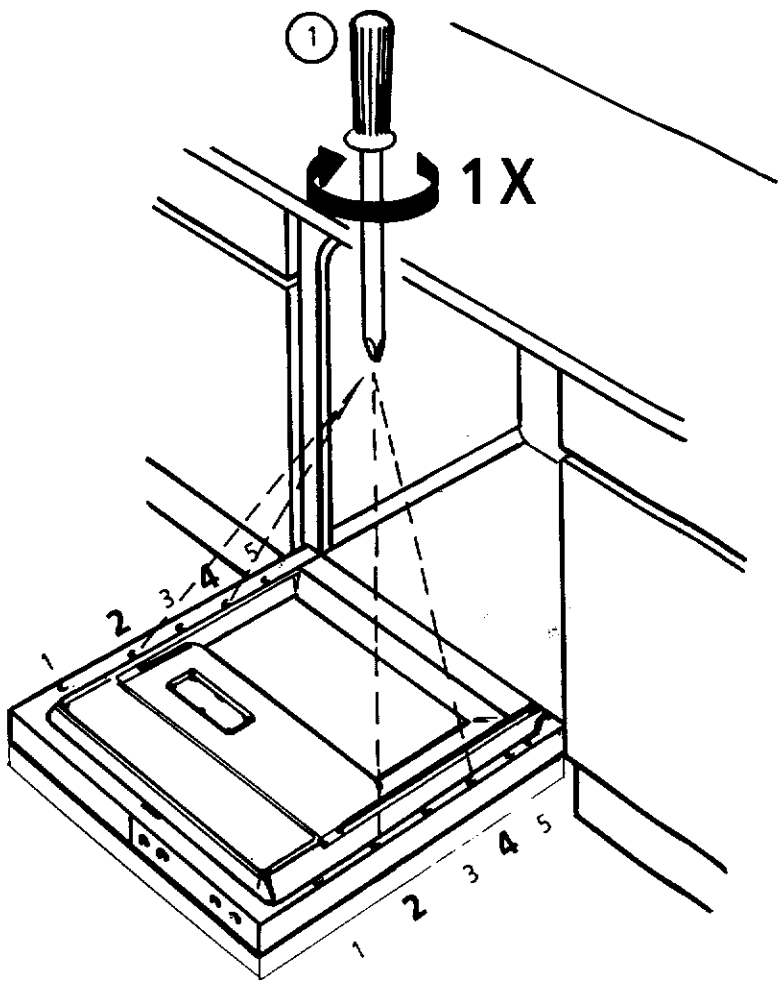

① Ⓓ Schrauben 2 + 4 locker anziehen.
ⒼⒷ Insert the screws 2 + 4 without tightening.
Ⓕ Ne pas serrer trop fort les vis 2 + 4.
ⓃⓁ Draai de schroeven 2 + 4 los.
Ⓔ Atornillar sin apretar los tornillos 2 + 4.
Ⓟ Aparafursar sem apertar os parafusos 2 + 4.
Ⓘ Avvitare senza stringere le viti 2 + 4.
ⒼⓇ Βιδώστε της βίδες 2 + 4 ελαφρώς.

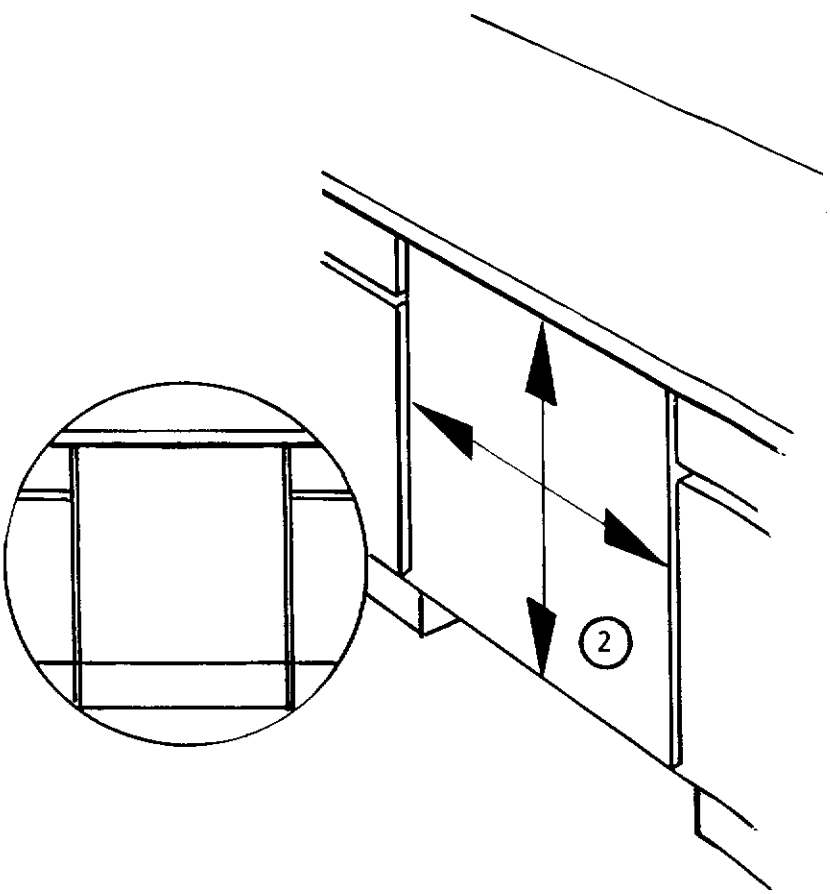

② Ⓓ Wenn nötig Position der Möbeltür korrigieren; Möbeltür soll oben bündig mit Bedienblende abschließen!
Dann Schrauben fest anziehen.
ⒼⒷ If necessary correct the position of the cabinet door; the top of the cabinet door should fit tightly with the covering panel.
Then tighten the screws.
Ⓕ Si nécessaire corriger la position de la porte du lave-vaisselle; le bord supérieur de la porte du lave-vaisselle doit se trouver, fermée, affleurer le bandeau de commande.
Puis serrer les vis à fond.
ⓃⓁ Stel de deur van het meubel bij als dat nodig is; De deur van het meubel moet aan de bovenkant goed sluiten met het bedieningspaneel! Draai dan de schroeven vast.
Ⓔ Si fuera necesario, modificar la posición de la puerta. La parte superior de la puerta del lavavajillas tiene que coincidir perfectamente con el panel de revestimiento. Por tanto, apretar a fondo los tornillos.
Ⓟ Se for necessário, modifique a posição da porta. A parte superior da porta da máquina deve ajustar-se perfeitamente ao painel de revestimento. A este ponto, aperte a fundo os parafusos.
Ⓘ Se necessario, modificare la posizione dello sportello. La parte superiore della porta della lavastoviglie deve combaciare perfettamente con il pannello di rivestimento.
Quindi stringere a fondo le viti.
ⒼⓇ Αν είναι απαραίτητο, αλλαξτε την θέση της πορτίτσας. Το πάνω τμήμα της πόρτας του πλυντηρίου πρέπει να εφάπτεται τελεια με το ταμπλώ-καλυμμα. Γι αυτό βιδώστε πολύ καλά τις βίδες.

11

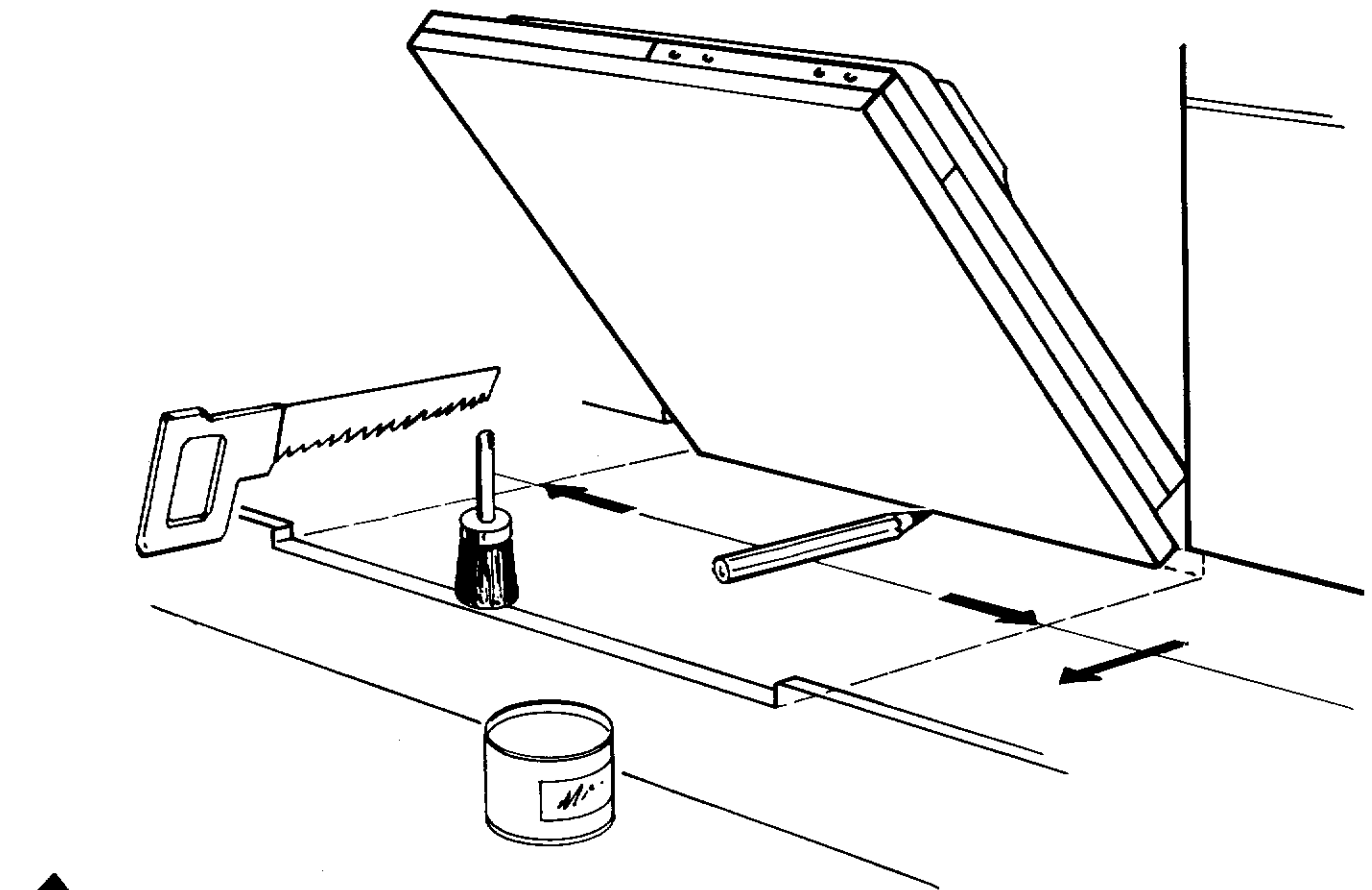

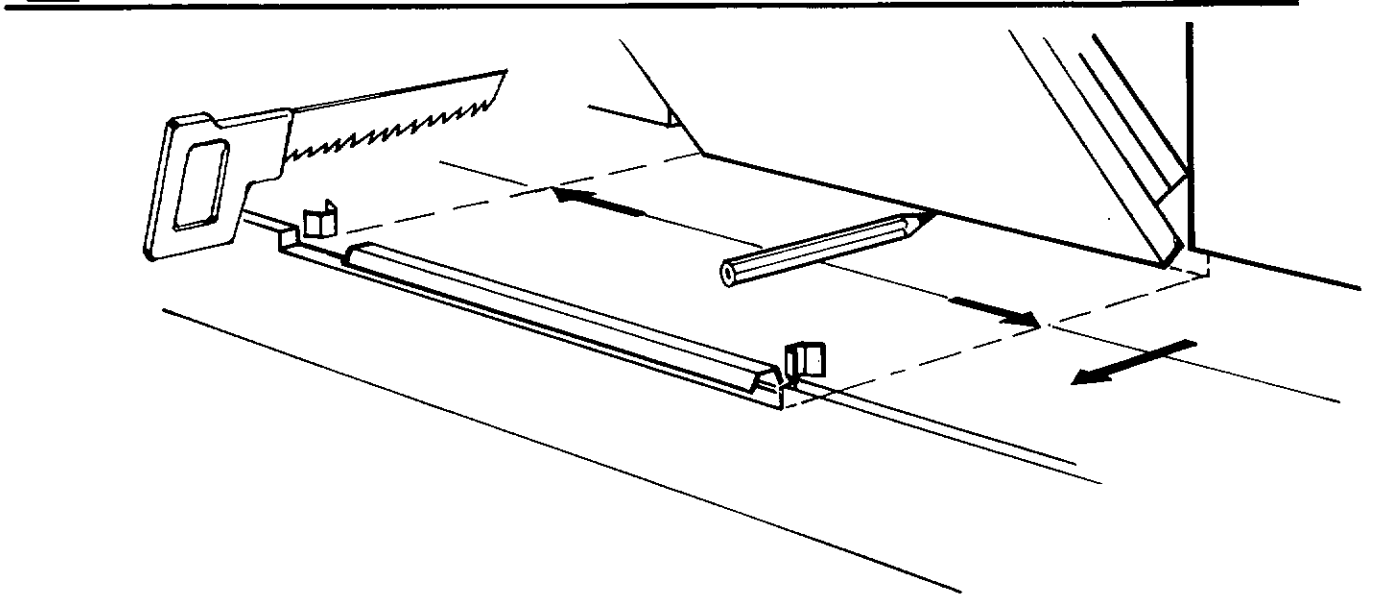

12.1

(D) Nur für Geräte mit aktiver Trocknung.
(GB) Only for dishwashers with thermodry (acive drying).
(F) Seulement pour appareils avec séchage actif.
(NL) Slechts bij apparaten met een droger.
(E) Solo para lavavajillas provistos de secado activo.
(P) Apenas para máquinas de lavar louça dotadas de secagem activa.
(I) Solo per lavastoviglie provviste di asciugatura attiva.
(GR) Μόνο για πλυντήρια με ενεργό στεγνωμα.

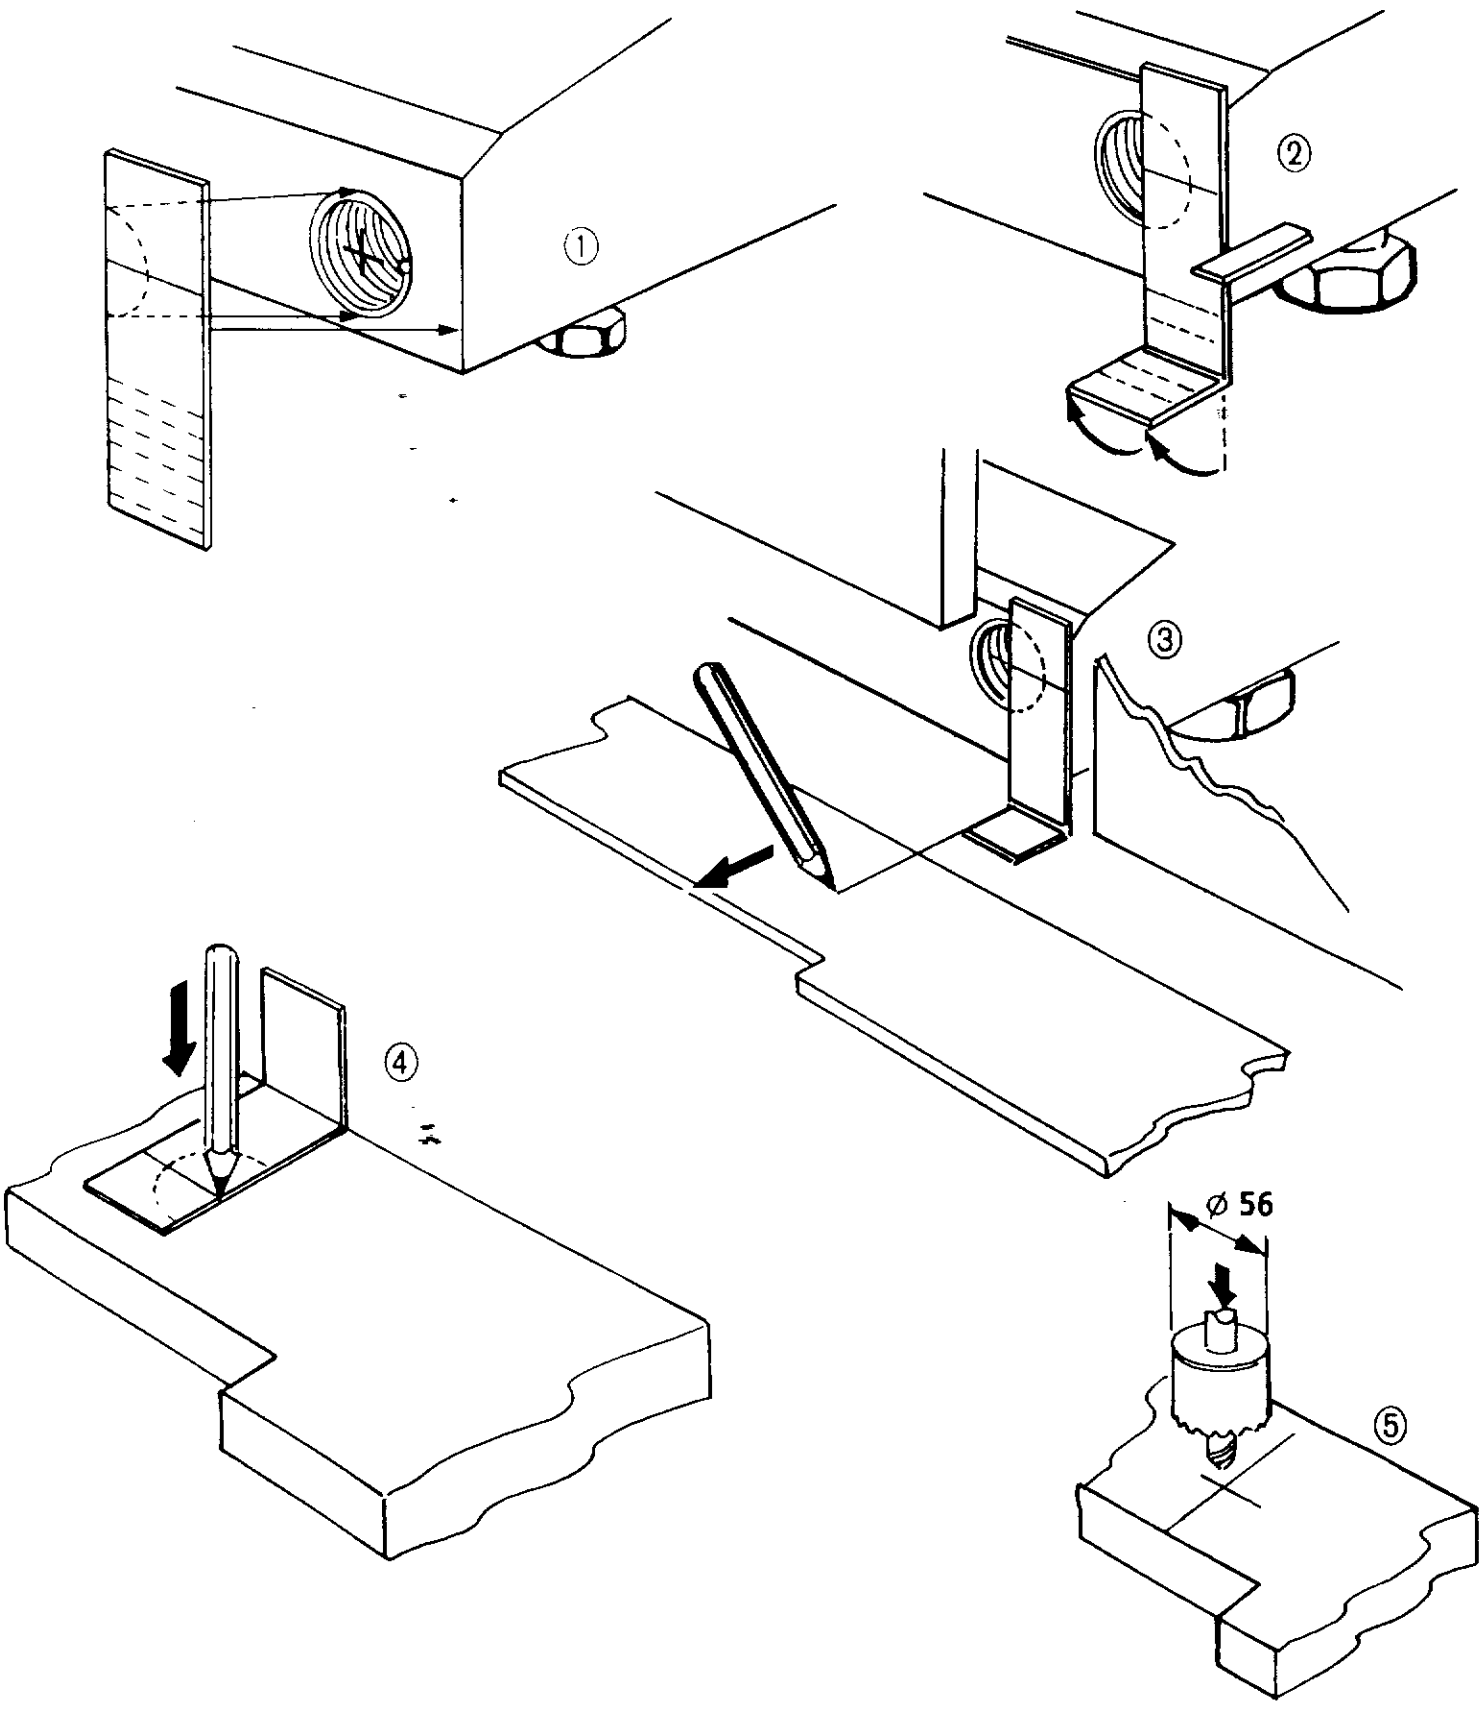

12.2

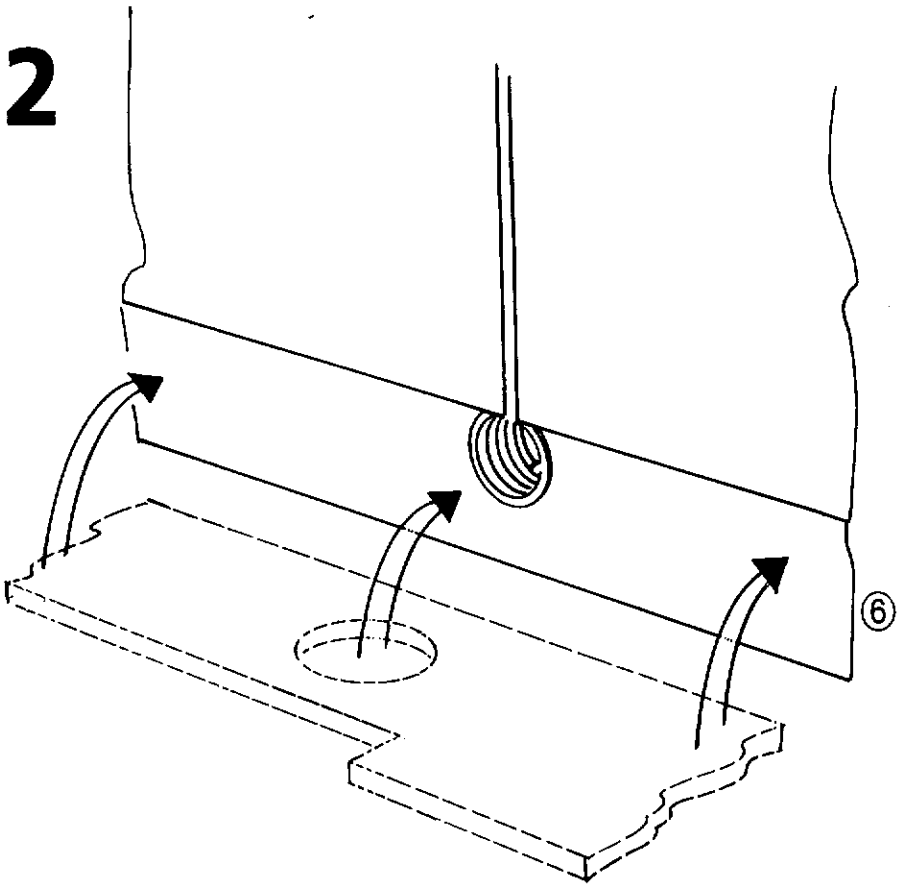

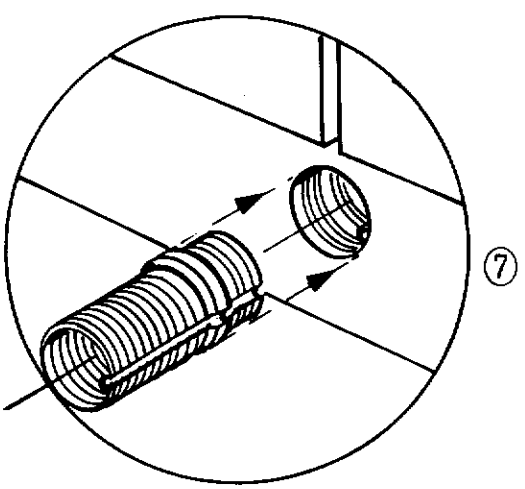

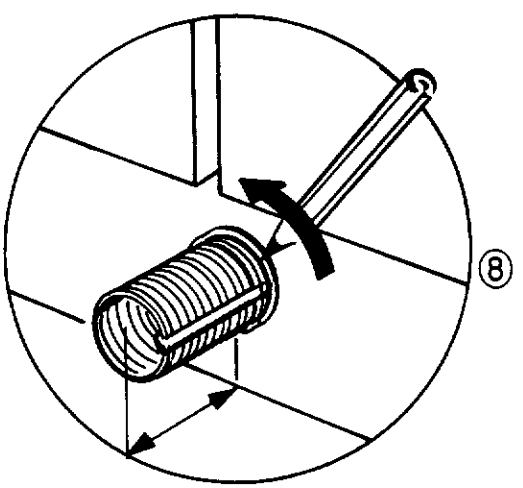

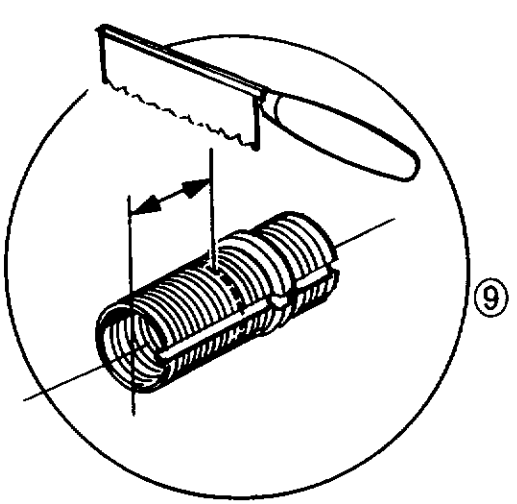

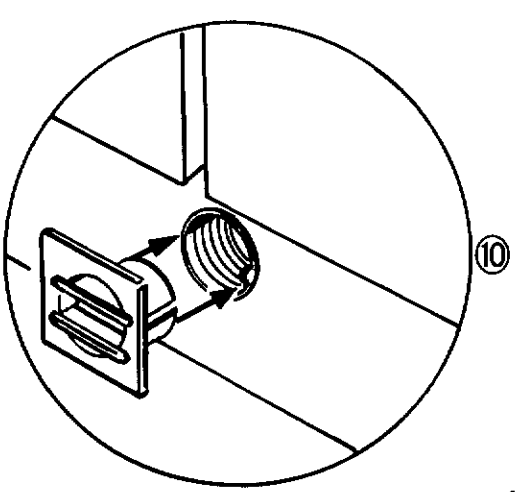

Total Chlorine Free

4619 720 64772-02

D GB F NL E P I GR

Printed in Germany
MA 5657/01.98

ELECTRICAL CONNECTION

1) For Great Britain only

Warning - this appliance must be earthed

Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:

1. Remove the fuse cover (**A**) and fuse (**B**).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

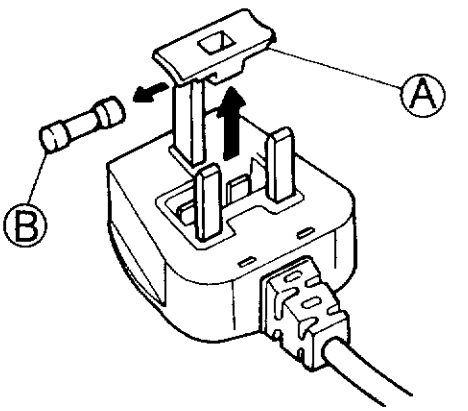

2) For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

3) Socket outlet / plug (valid for both countries)

If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations.

PRECAUTIONS AND GENERAL RECOMMENDATIONS

1. **Packing:**
   The packing box may be fully recycled as confirmed by the recycling symbol.

2. **Energy and water saving tips:**
- Do not rinse crockery under running water.
- Always fully load the dishwasher before switching on or set the wash programme to Half load/ Multizone (if available) if **one** rack only is loaded.
- If ecological energy sources are available such as solar panel heating, heat pumps or centralised heating systems, the appliance may be connected to the hot water mains up to a maximum temperature of 60° C. Make sure the water inlet hose is of the correct type. Refer to the "Connections" chapter in these user instructions.

3. **Disposal:**
   The appliance is built from reusable materials.
   If you decide to scrap the dishwasher, it must be disposed of in compliance with local waste disposal laws.
   Before scrapping, cut off the power cable so that the appliance cannot be connected to the mains.

4. **Child safety:**
- Children must not be allowed to play with the dishwasher.
- Store the detergent, rinse aid and salt in a dry place out of the reach of children.

5. **General recommendations:**
- The open dishwasher door can only support the weight of the loaded rack when pulled out. Do not rest objects on the open door or sit or stand on it: **the appliance may topple over!**
- Do not use solvents inside the dishwasher: **risk of explosion!**
- Only use detergents, rinse aids and regeneration salts specially recommended for use in domestic dishwashers.
- Before cleaning or carrying out maintenance, switch off the appliance, disconnect the mains plug and turn off the water tap.
- If a fault occurs, switch off the appliance and turn off the water tap.
- If necessary, the power cable may be replaced with one the same obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.
- On completion of the programme switch off the dishwasher and turn off the water tap.

6. **For appliances with water stop system:**
   The water inlet hose and plastic casing contain electrical components. Do not therefore cut the hose or immerse the plastic casing in water.
   If the hose is damaged switch off the appliance immediately.

EC Declaration of conformity:
This appliance has been designed, constructed and distributed in compliance with the safety requirements of EC Directives:
- 73/23/EC
- 89/336/EC
- 93/68/EC

CE

Load capacity:
12 place settings.

HOW TO FILL THE RINSE AID DISPENSER

The rinse aid facilitates drying and prevents the formation of unsightly spots and streaks on crockery. Before using the dishwasher for the first time, fill the rinse aid dispenser. Only use rinse aids recommended for use in domestic dishwashers.

1. Press button **A** to open the cover (see drawing).
2. Fill the dispenser with rinse aid up to the dashed line (about 100 ml **maximum**).
   Immediately wipe away any rinse aid spilt accidentally! This prevents the formation of excess suds which may spoil washing results.
3. Close the cover.

Thereafter, regularly check the rinse aid level.

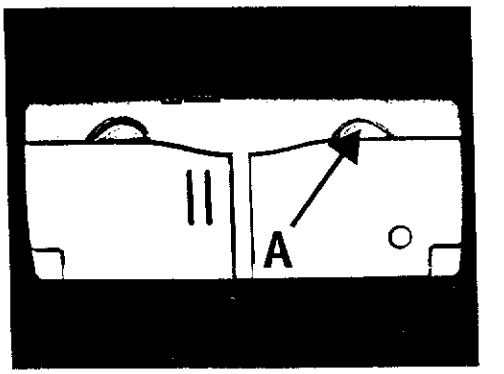

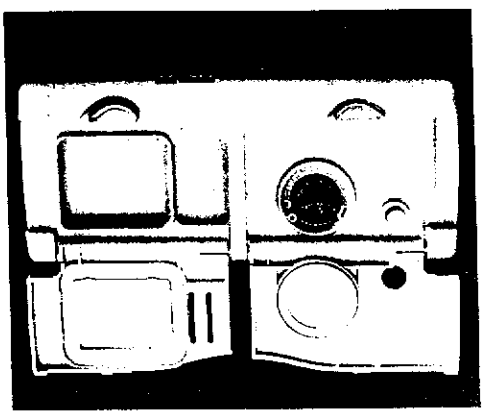

How to adjust the rinse aid dosage regulator:

Factory setting: position 4.

If you are not satisfied with washing or drying results, change the rinse aid dosage setting.

1. Press button **A** to open the cover (see drawing).
2. If crockery is prone to whitish streaks: reduce the dosage by turning the dial to a lower setting (1-3) using a coin or the like.
   If crockery is not perfectly dry: increase the dosage by turning the dial to a higher setting (5-6).
3. Close the cover.

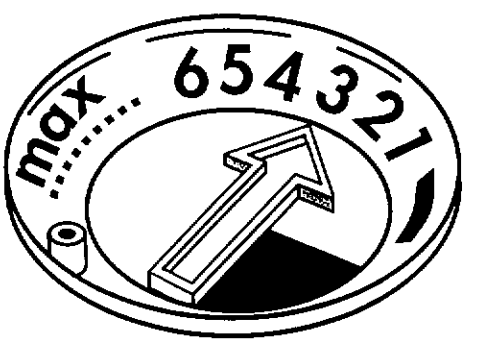

Rinse aid level indicator:

Visual indicator:

light add rinse aid

dark sufficient rinse aid.
Do not add any!

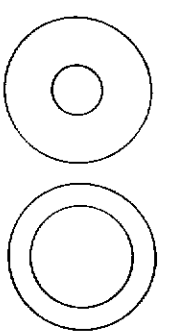

Electric indicator (if provided):

The indicator lamp on the control panel lights up when more rinse aid needs to be added.

HOW TO FILL THE DETERGENT DISPENSER

A small compartment and a large compartment are provided for the detergent.

The use of detergent in excess of the recommended dosage may cause pollution. The recommended dosage varies for different brands.

If you use detergents in pellet form, follow the manufacturer's directions for use.

"New generation" detergents contain enzymes that give better washing results when Bio programmes are used. However, these programmes are also suitable for all other dishwasher detergents.

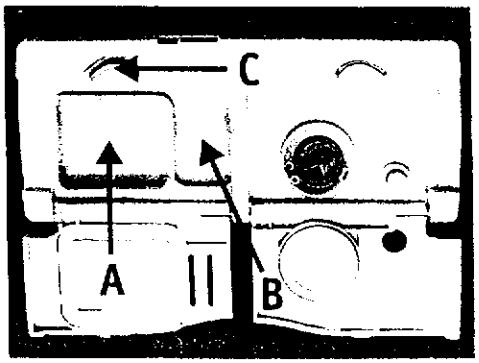

How to fill the detergent dispenser:

Only use regeneration salts for use in domestic dishwashers.

Only fill the detergent dispenser prior to starting a wash programme.

1. Press button **C** to open the cover.

2. How to fill the detergent dispenser:

   Programmes with pre-rinse:
   - Pour 2/3 of the dosage recommended by the manufacturer into the **large compartment (A)**.
   - Pour the remaining third in the **small compartment (B)**.

   Programmes without pre-rinse:
   - Pour the entire recommended dosage into the large compartment (**A**). If the recommended dosage on the detergent pack is over 45 ml (maximum capacity of the large compartment), pour the remaining detergent into the small compartment (**B**).

   For programmes with additional "Half load/Multizone" function selected (if provided):
   - Use a smaller quantity of detergent.

3. Close the cover.

CARE AND MAINTENANCE

Before cleaning or carrying out maintenance, switch off the appliance, disconnect the mains plug and turn off the water tap.

Cleaning the outside of the appliance:

To clean the outside of the appliance, use a neutral detergent and a damp cloth.
Clean the control panel with a damp cloth only.

Do not use abrasive detergents.

Cleaning the inside of the dishwasher:

Regularly wipe the door seal and inside of the door with a damp cloth to remove any food residue.

Upper spray arm:

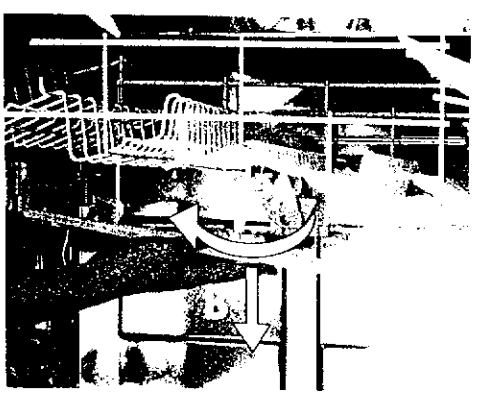

1. Slacken the fixing nut (**A**) (by turning it counter-clockwise) and detach the spray arm (**B**) by pulling it down).
2. Rinse the nozzles.
3. To remount the spray arm, align it and then tighten the fixing nut (by turning it clockwise), paying attention not to bend it.
   The fixing nut must be tightened until it clicks!

   Make sure the spray arm rotates freely.

Lower spray arm:

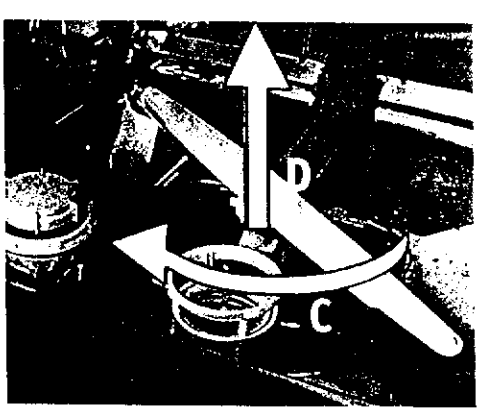

1. Slacken the fixing nut (**C**) (by turning it counter-clockwise) and detach the spray arm (**D**) by pulling it upwards.
2. Rinse the nozzles.
3. To remount the spray arm, align it and then tighten the fixing nut (by turning it clockwise), paying attention not to bend it.
   The fixing nut must be tightened until it clicks!

   Make sure the spray arm rotates freely.

CARE AND MAINTENANCE

Cleaning the filters

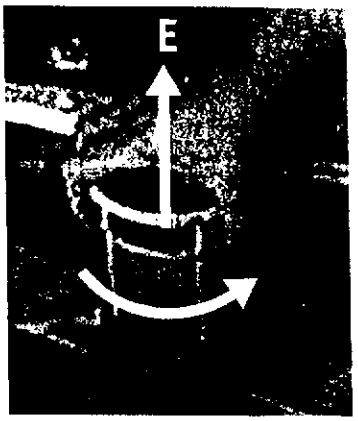

1. Rotate the microfilter counter-clockwise (in the direction of the arrow "0") and extract it (**E**).
2. Place the microfilter/wide-mesh central filter unit on a flat surface and push the handle of the microfilter (**F**).
   Extract the wide-mesh filter by pushing it forward (**G**).
3. Remove the fine-mesh filter (**H**).
4. Clean all filters under running water, paying attention not to bend the fine-mesh filter. Check that no impurities are left inside the dishwasher!
5. Remounting:
   Insert the wide-mesh filter in the microfilter (click should be heard!) Insert the fine-mesh filter. **The filter must be fitted under both tongues.**
   Insert the microfilter/wide-mesh central filter unit and turn clockwise to lock (in the direction of arrow "1"), until the dashed lines on the microfilter and fine-mesh filter are aligned.

   The filter unit must be correctly assembled to ensure good wash results!

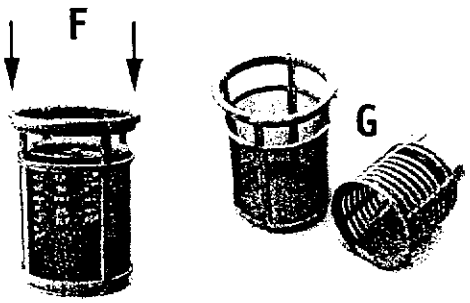

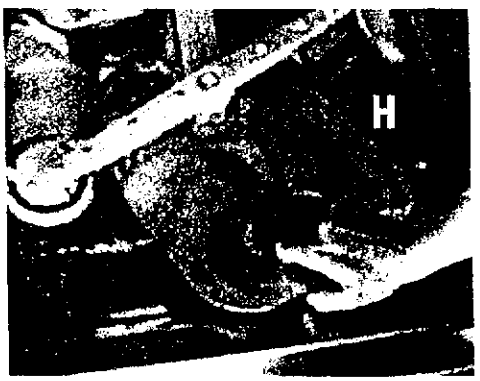

Whirlpool is a registered trademark of Whirlpool, USA

Whirlpool
Home Appliances

BRINGS QUALITY TO LIFE

5019 396 94104

D GB

Printed in Germany
GA 5118/07.01